



MOUNTING PROCEDURE


KIT SAVE CARTER
BMW S1000 RR '15

BS1101-15

WWW.BARRACUDAMOTO.COM

KIT

X2. HEAD PVC CRASH PAD
X2. BASE CRASHPAD
X1. THICKNESS H.55 (LEFT SIDE)
X1. THICKNESS H.31 (RIGHT SIDE)
X1. SCREW 10X100 (RIGHT SIDE)
X1. SCREW 10X120 (LEFT SIDE)

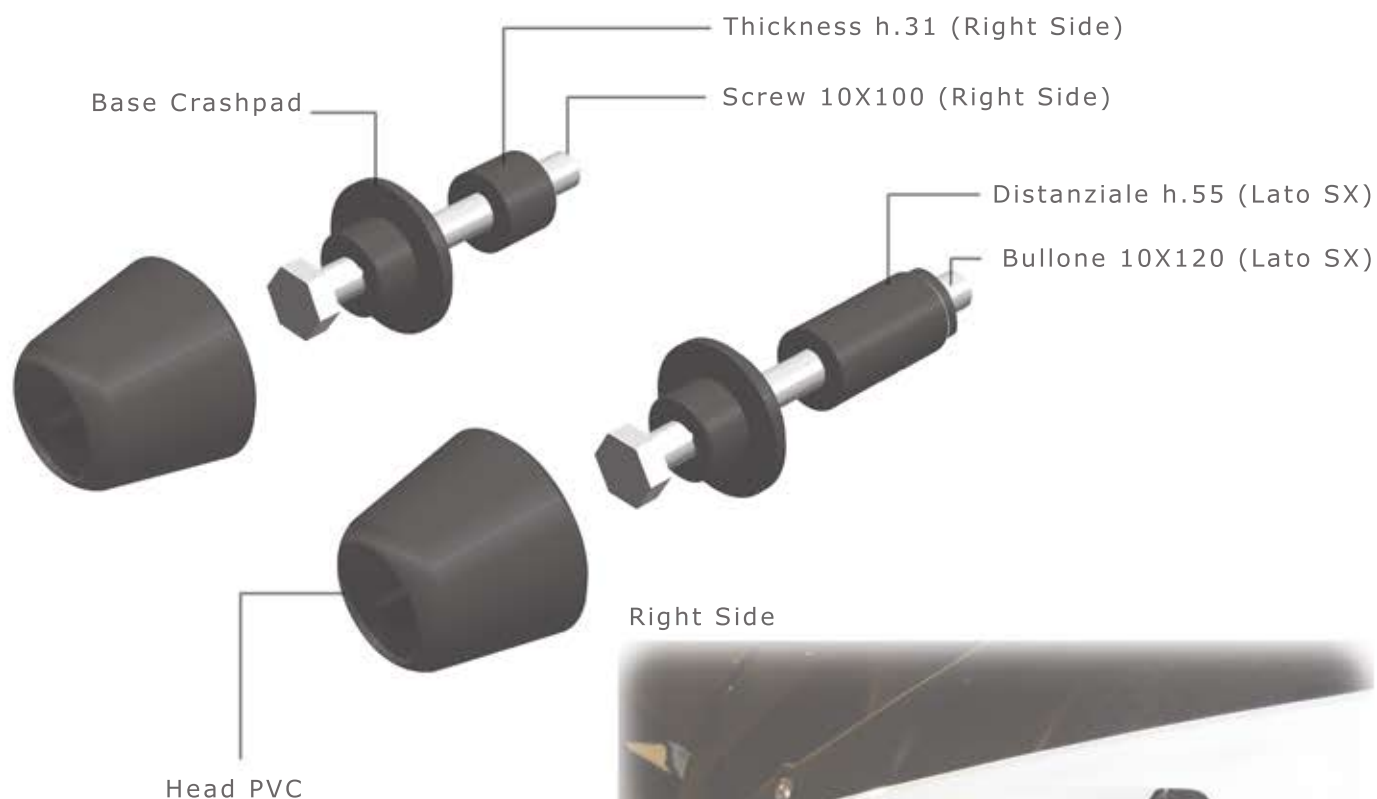

Right Side



FIND THE FIXING POINT ON THE MOTORBIKE;

USE THE SPECIFIC THICKNESS AND BOLTS LIKE DESCRIBED IN THE PICTURE TO OBTAIN THE CORRECT PROJECTION FROM THE CRASH PAD OF MOTORBIKE;

FIX THE PVC HEAD OF CRASH PAD AFTER FIXING AND LOCKING ALL THE KIT ONLY.