

**ISTRUZIONI DI MONTAGGIO****KIT PORTATARGA  
BMW R-NINET****BT1104**[WWW.BARRACUDAMOTO.COM](http://WWW.BARRACUDAMOTO.COM)**KIT**

X1. STAFFA SPECIFICA  
X6. RONDELLE GOMMA  
X2. BRUGOLE 5X16 "TESTA BOMBATA"  
X2. BRUGOLE 5X20 "TESTA BOMBATA"  
X1. BRUGOLE 6X35 "TESTA CILINDRICA"  
X2. DADO CIECO Ø 6  
X2. TORNITI H5  
X1. RONDELLE Ø 6 "LARGHE"  
X1. FASCETTA NERA

**PROCEDURA MONTAGGIO:**

- RIMUOVERE IL PORTATARGA ORIGINALE, SMONTARE IL FARO DA ESSO E ACCOSTARLO AL PORTATARGA BARRACUDA POSIZIONANDO LA STAFFA SPECIFICA COME DA FOTO E SCHEMA MONTAGGIO;
- POSIZIONARE LA FASCETTA IN DOTAZIONE NEL FORO CENTRALE PER FERMARE I CAVI ALL'INTERNO;
- INDIVIDUARE I PUNTI DI FISSAGGIO E MONTARE IL PORTATARGA UTILIZZANDO BRUGOLE 5X20, 5X16 E 6X35 COME DA SCHEMA DI MONTAGGIO;
- SERRARE LE BRUGOLE E RIPETERE L'OPERAZIONE PER TUTTI I PUNTI DI FISSAGGIO DELLA STAFFA;
- APPLICARE LA "X" TARGA ALLO SNODO DELLA STAFFA SPECIFICA;

Rondella gomma

Staffa specifica

Dado cieco

Tornito

Brugola 5x20

Rondella Ø 6 "Larga"

Brugola 6x35

Fascetta

Brugola 5x16


NOTE: SI CONSIGLIA, DI MANTENERE UN INCLINAZIONE NON SUPERIORE A 30° PER NON INCOMBERE IN SANZIONI DEL CODICE DELLA STRADA E PER EVITARE POSSIBILI ROTTURE STRUTTURALI

**MOUNTING PROCEDURE****KIT LICENCE PLATE  
BMW R-NINET****BT1104**[WWW.BARRACUDAMOTO.COM](http://WWW.BARRACUDAMOTO.COM)**KIT**

X1. SPECIFIC BRACKET  
X6. RUBBER WASHER  
X2. SCREW 5X16 "ROUND HEAD"  
X2. SCREW 5X20 "ROUND HEAD"  
X1. SCREW 6X35  
X2. AUTOLOCK NUT Ø 6  
X2. THICKNESS H5  
X1. LARGE WASHER Ø 6  
X1. BLACK STRIPS

**MOUNTING PROCEDURE:**

- REMOVE THE ORIGINAL LICENCE PLATE, UNFIX THE HEADLIGHT FROM THE LICENCE PLATE AND APPROACH TO THE BARRACUDA LICENCE PLATE PUTTING THE SPECIFIC BRACKET LIKE SHOWN IN THE PICTURE AND MOUNTING PROCEDURE.
- PUT THE STRIPES YOU FIND IN THE KIT INTO THE CENTRAL HOLE TO STOP THE CABLES INSIDE IT
- . FIND THE FIXING POINT AND MOUNT THE LICENCE PLATE USING THE 5X20, 5X16 SCREWS AND THE 6X35 LIKE MOUNTING PROCEDURE;
- LOCK THE SCREW AND REPEAT THE OPERATION FOR ALL THE FIXING POINT ON THE BRACKET;
- APPLY THE "X" LICENCE PLATE TO THE JUNCTION OF THE SPECIFIC BRACKET;

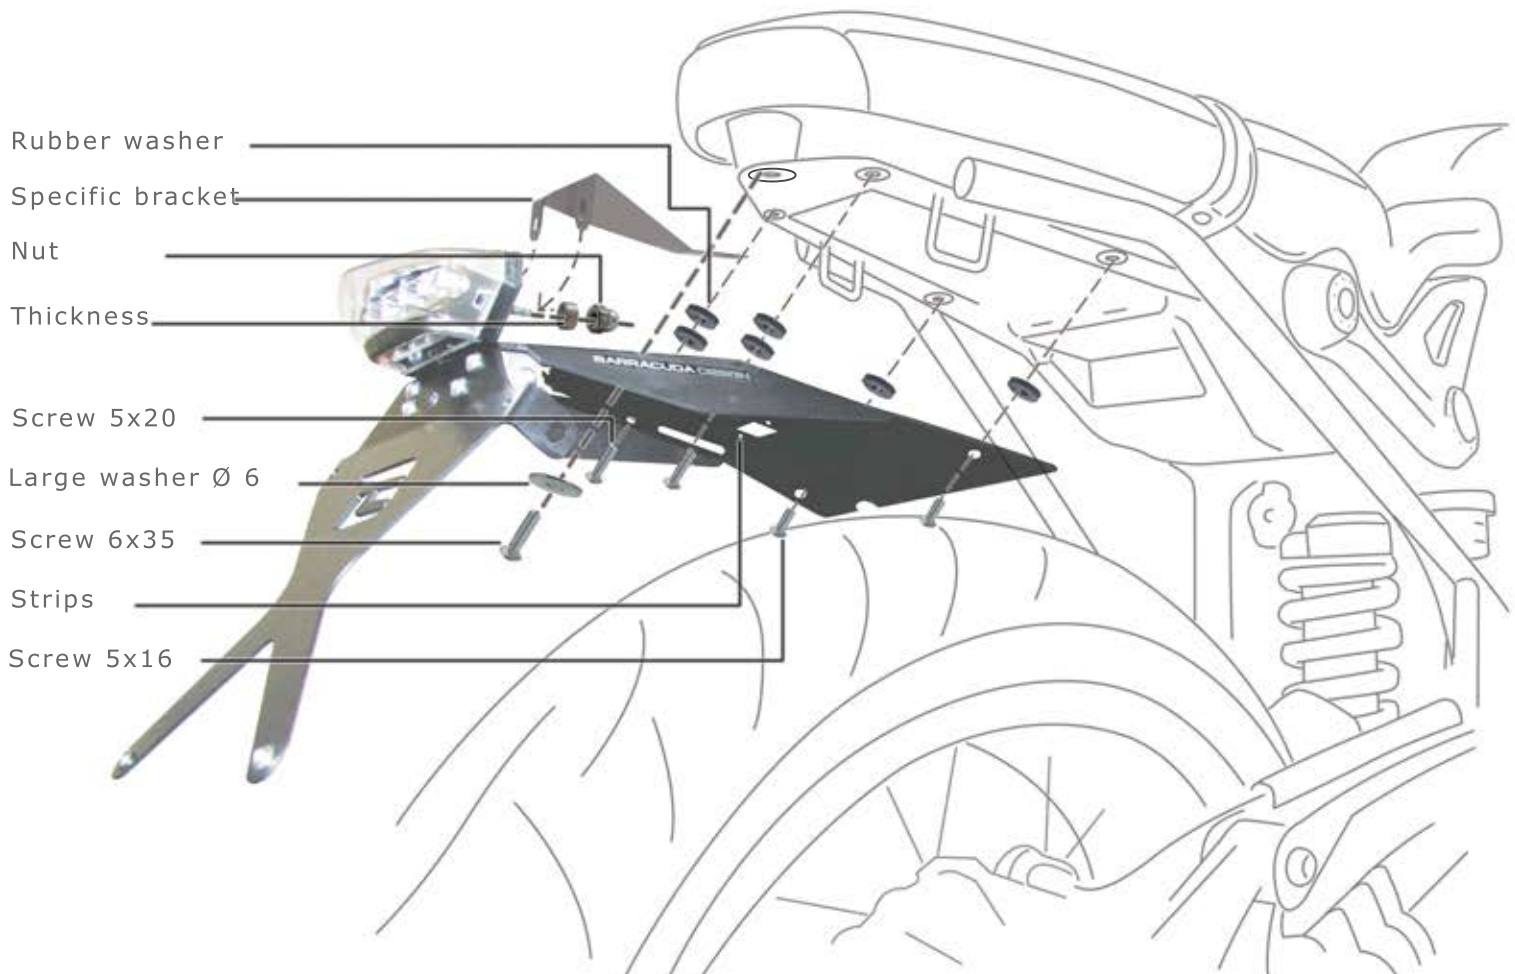

NOTE: WE ADVISE AN INCLINATION NOT EXCEEDING 30° TO AVOID SANCTIONS AND POSSIBLE DAMAGES