

**MOUNTING PROCEDURE**

KIT NUMBER PLATE  
BMW R-NINET

**BT1400**


[WWW.BARRACUDAMOTO.COM](http://WWW.BARRACUDAMOTO.COM)

**KIT**

X2. SPECIFIC BRACKET  
X4. WASHER Ø 5  
X4. WASHER Ø 5 LARGHE  
X4. SCREW 5X16 "ROUND HEAD"  
X4. SCREW 5X10 "ROUND HEAD"  
X4. AUTOLOCK NUT  
X4. SQUARE STICKER

**MOUNTING PROCEDURE:**

- PUT IN POSITION THE BRACKET OF KIT NUMBER PLATE FINDING THE FIXING HOLES LIKE SCHEME;
- APPLY THE SQUARE STICKERS INTO THE SQUADRED SHOWED (BELOW PART)
- APPROACH THE KIT NUMBER PLATE AND FIND THE RIGHT POSITION;
- LOCK THE SCREWS AND REPEAT THIS FOR ALL THE FIXING POINTS OF BRACKET;

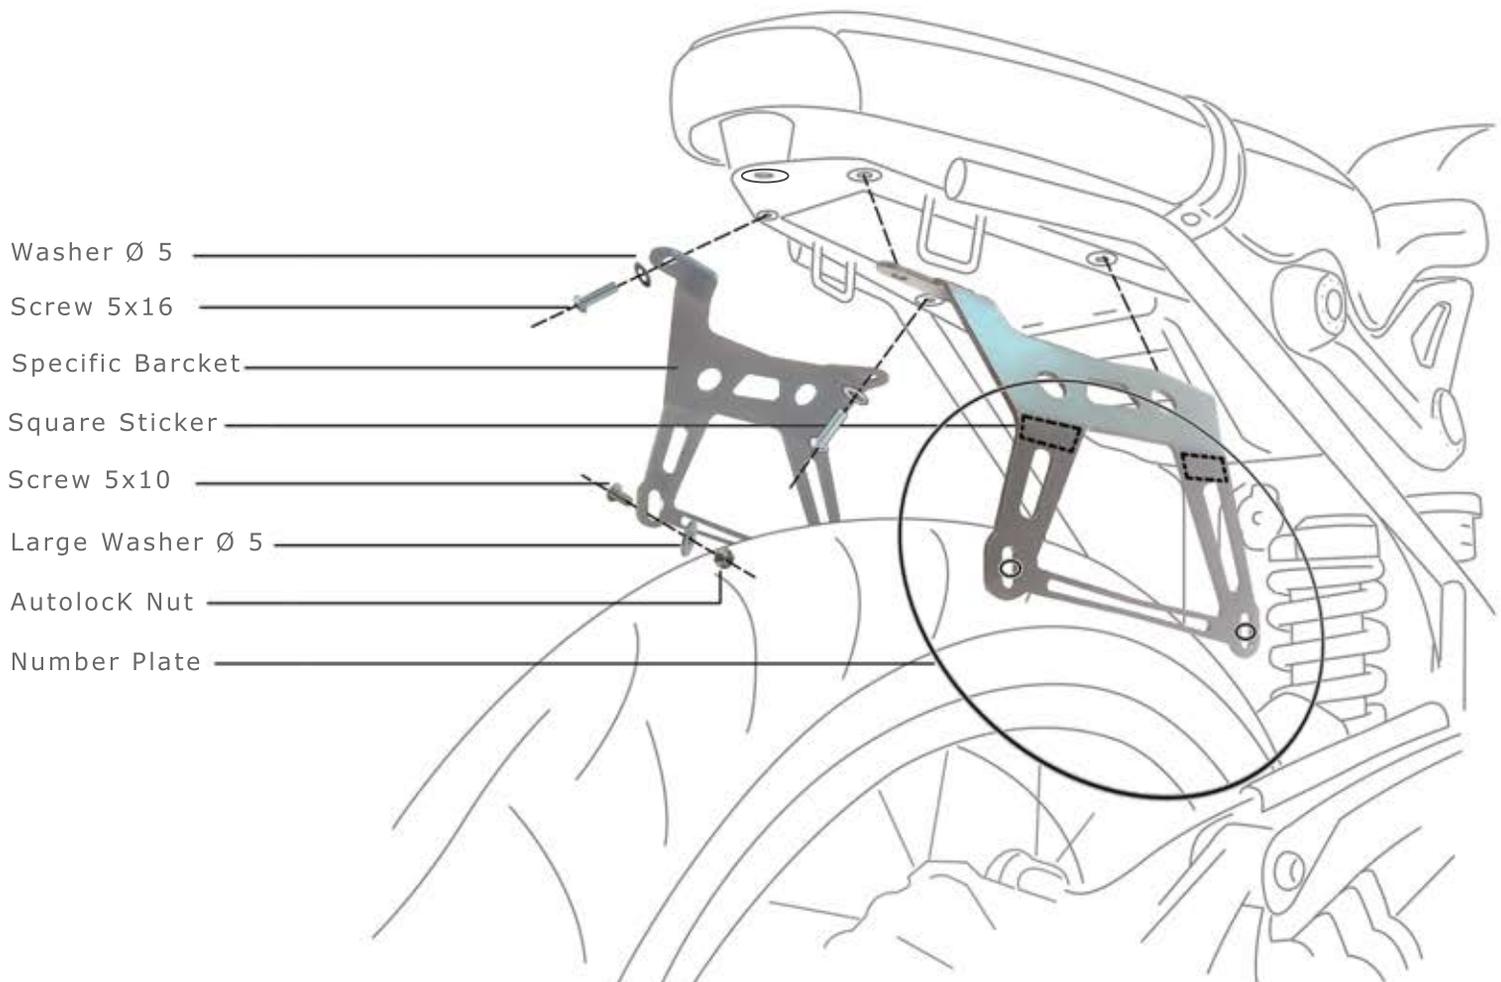

NOTE: AVAILABLE ONLY WITH THE BARRACUDA'S LICENCE PLATE