

## MOUNTING PROCEDURE

### KIT WINDSHIELD DUCATI MONSTER 821

### DN8300

#### KIT


- X1. PLEXIGLASS
- X4 SPECIFIC BRACKET
- X4 SPECIAL WASHER
- X4 "ROUND HEAD" SCREW 5X12
- X2 "ROUND HEAD" SCREW 8X45
- X2 SQUARE 6X16 SCREW
- X2 NUT DIAM 6
- X2 THICKNESS H 16
- X4 TEFLON WASHER DIAM 5
- X2 TEFLON WASHER DIAM 6
- X8 RUBBER WASHER

WWW.BARRACUDAMOTO.COM


#### MOUNTING PROCEDURE

- UNFIX THE HIGHLIGHT SCREWS OF STEERING PLATE (1-1)
- APPROACH THE TWO SPECIFIC BRACKET TOGETHER (A-B) LIKE SHOWN IN THE PICTURE.
- FIND THE RIGHT POSITION OF WINDSHIELD ON THE BRACKET ALREADY FIXED AND LOCK ALL;

#### FIXING ON THE BIKE

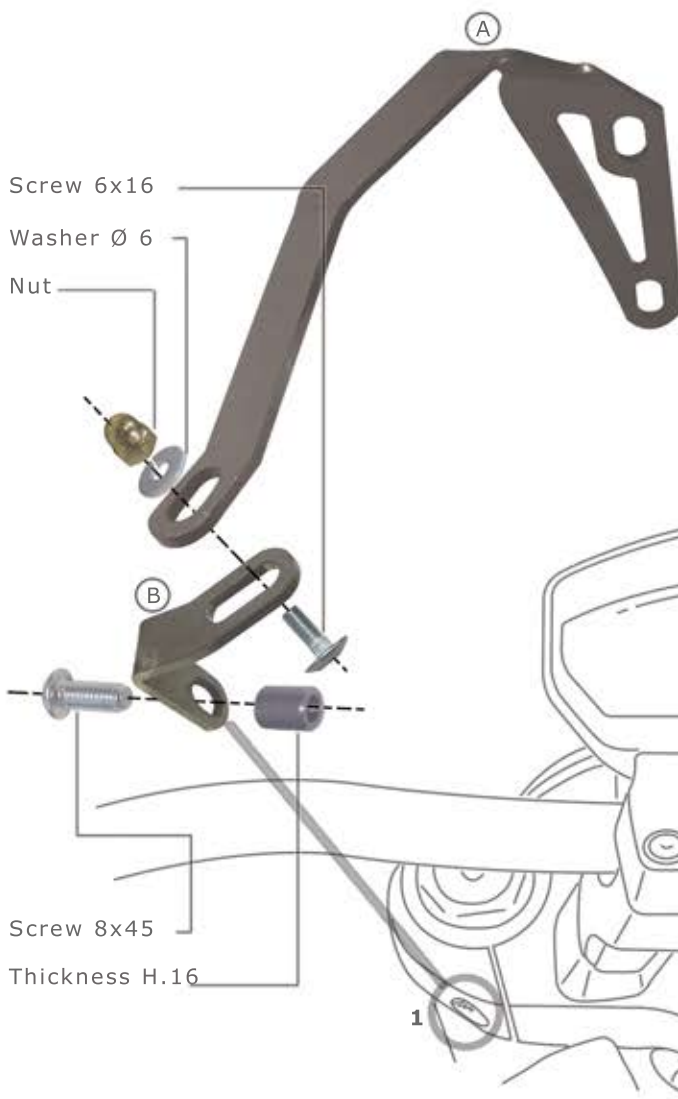

#### FIXING WINDSHIELD

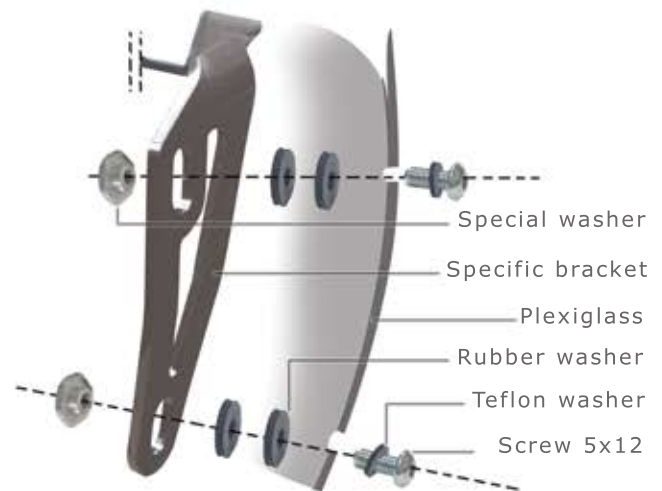

NOTE: DON'T LOCK TOO MUCH TO AVOID PLEXIGLASS BROKEN

**ISTRUZIONI DI MONTAGGIO****KIT CUPOLINO  
DUCATI MONSTER 821****DN8300**[WWW.BARRACUDAMOTO.COM](http://WWW.BARRACUDAMOTO.COM)**PROCEDURA MONTAGGIO:**



RIMUOVERE LE BRUGOLE SUPERIORI DELLA PIASTRA STERZO EVIDENZIATE (1-1);

ACCOSTARE ASSIEME LE DUE STAFFE SPECIFICHE (A-B) COME DA ILLUSTRAZIONE;

TROVARE LA GIUSTA POSIZIONE DEL CUPOLINO SULLE STAFFE PRECEDENTEMENTE MONTATE E PROCEDERE AL SERRAGGIO DI TUTTA LA VITERIA;

**KIT**

- X1. PLEXIGLASS
- X4. STAFFE SPECIFICHE
- X4. BOCCOLE SPECIALI
- X4. BRUGOLE "TESTA BOMBATA" 5X12
- X2. BRUGOLE "TESTA BOMBATA" 8X45
- X2. BRUGOLA "SAGOMA QUADRA" 6X16
- X2. DADO CIECO Ø 6
- X2. SPESSORI H.16
- X4. RONDELLE TEFLON Ø 5
- X2. RONDELLE Ø 6
- X8. RONDELLE DI GOMMA

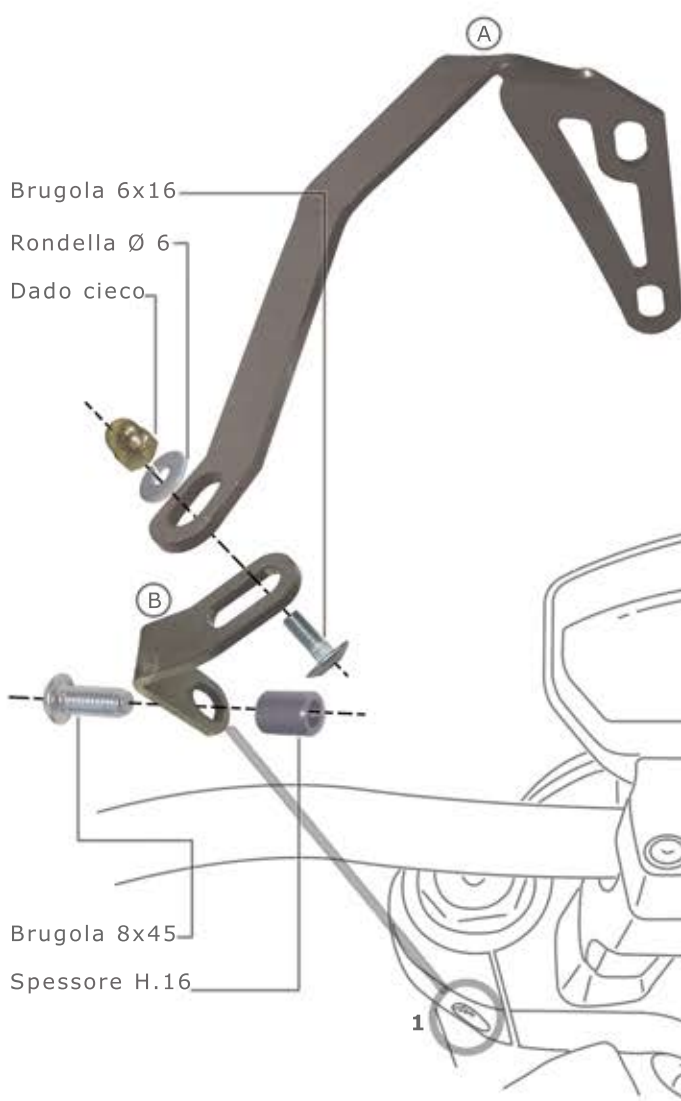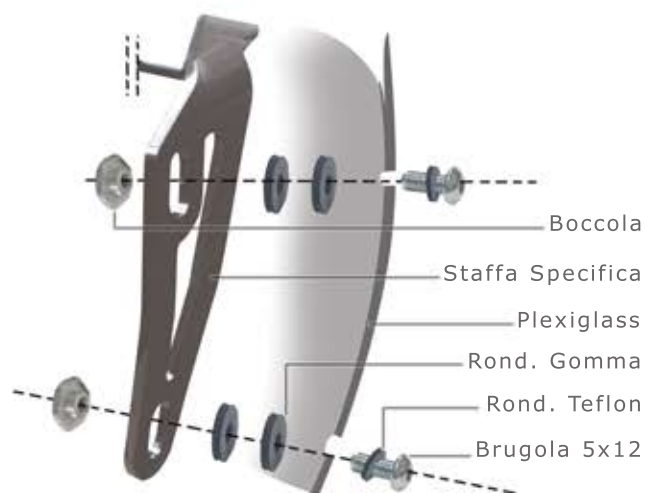**FISSAGGIO MOTO****FISSAGGIO CUPOLINO**

NOTE: NON SERRARE IN MODO ECCESSIVO ONDE EVITARE ROTTURE DEL PLEXIGLASS.