


**MOUNTING PROCEDURE****KIT WINDSHIELD  
DUCATI STREETFIGHTER****DS1300****KIT**

- X2. BRACKET (1 RIGHT + 1 LEFT)
- X4. THICKNESS 10 MM
- X2. WASHER DIAMETER 8
- X2. SCREW 8X45
- X4. SCREW 5X16
- X4. TEFLON WASHER DIAMETER 5
- X4. RUBBER WASHER
- X4. WASHER DIAMETER 5
- X4. AUTOLOCK NUT

[WWW.BARRACUDAMOTO.COM](http://WWW.BARRACUDAMOTO.COM)

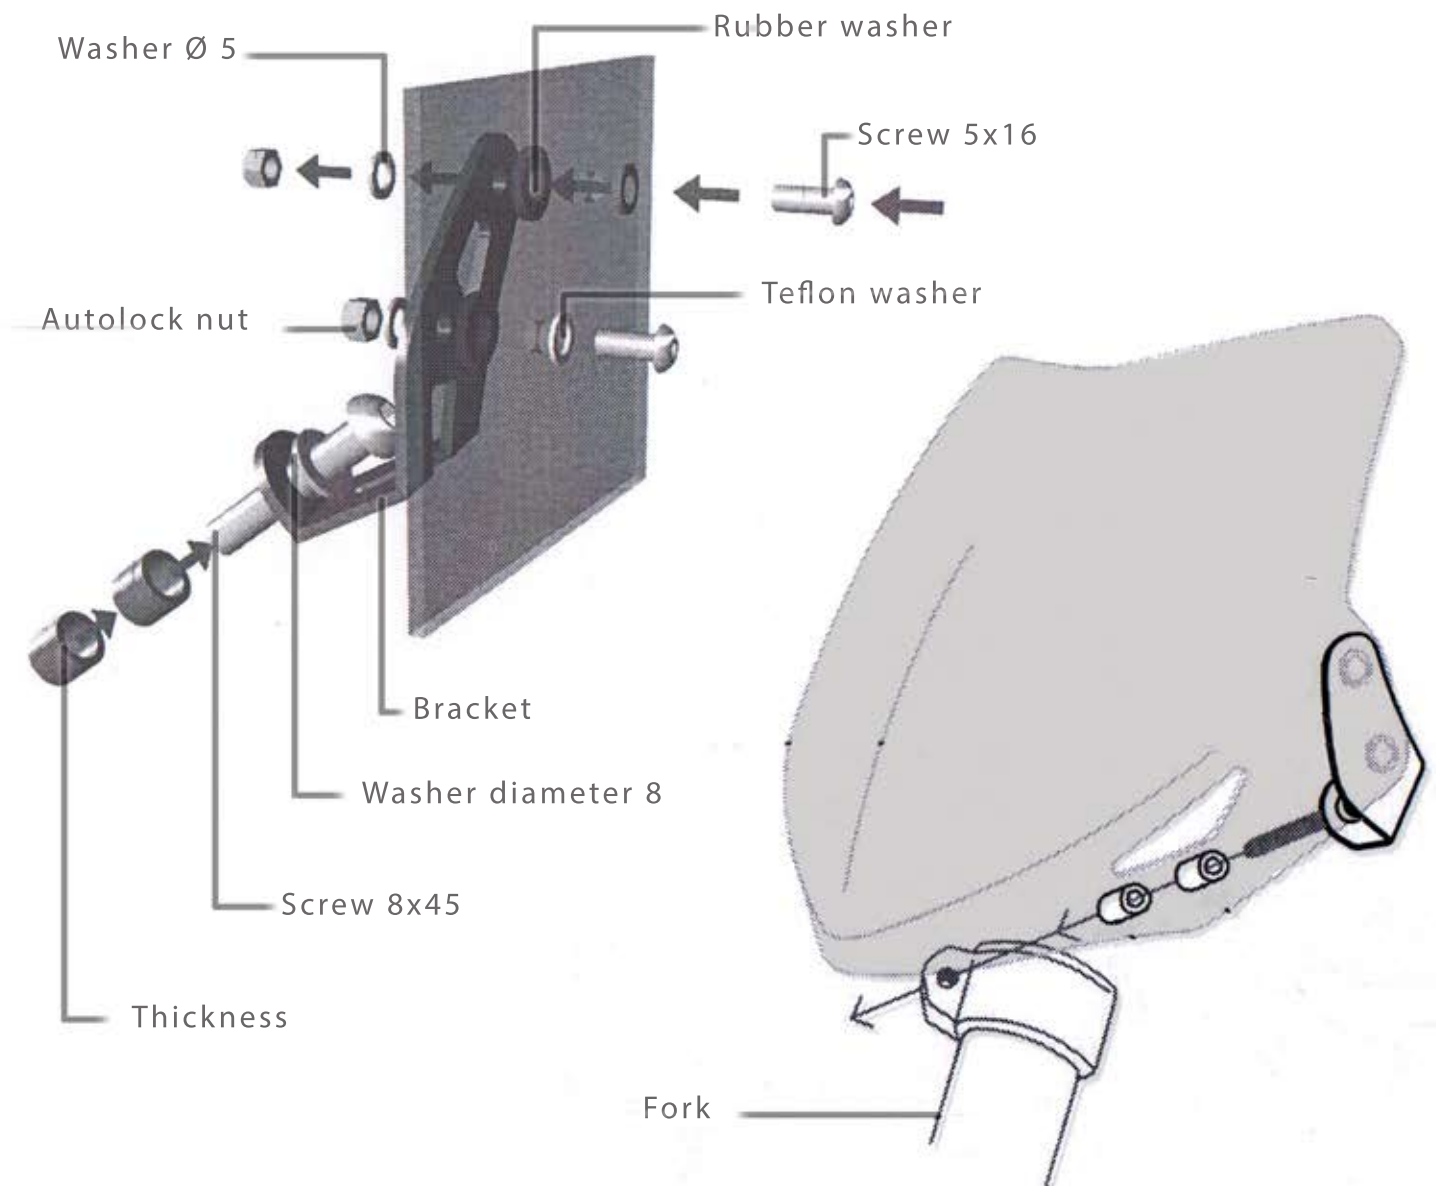


MOUNT THE DUCATI STREETFIGHTER KIT ON THE BARRACUDA WINDSHIELD/SCREEN USING THE SPECIFIC BRACKET AND THE MOUNTING KIT LIKE SHOWN IN THE PICTURE.

LODGE THE WINDSHIELD/SCREEN MOUNTED ON THE UPPER PART OF THE FORK USING THE ORIGINAL ATTACK HOLE.

USE THE TWO THICKNESS FOR EACH SIDE BETWEEN THE BRACKET AND THE SUPERIOR BASE OF FORK. USE THE TEFLON WASHER DIAMETER 5 BETWEEN THE HEAD OF THE SCREW AND THE WINDSHIELD/SCREEN WHILE THE RUBBER WASHER BETWEEN THE BRACKET AND THE WINDSHIELD/SCREEN

**ISTRUZIONI DI MONTAGGIO****KIT CUPOLINO DUCATI  
STREETFIGHTER****DS1300**[WWW.BARRACUDAMOTO.COM](http://WWW.BARRACUDAMOTO.COM)**KIT**

X2. STAFFA SPECIFICA (1 DESTRA + 1 SINISTRA)  
 X4. SPESSORE 10MM  
 X2. RONDELLA Ø 8  
 X2. BRUGOLA 8X45  
 X4. BRUGOLA 5X16  
 X4. RONDELLA TEFLON Ø 5  
 X4. RONDELLA GOMMA  
 X4. RONDELLA Ø 5  
 X4. DADI AUTOBLOCCANTI

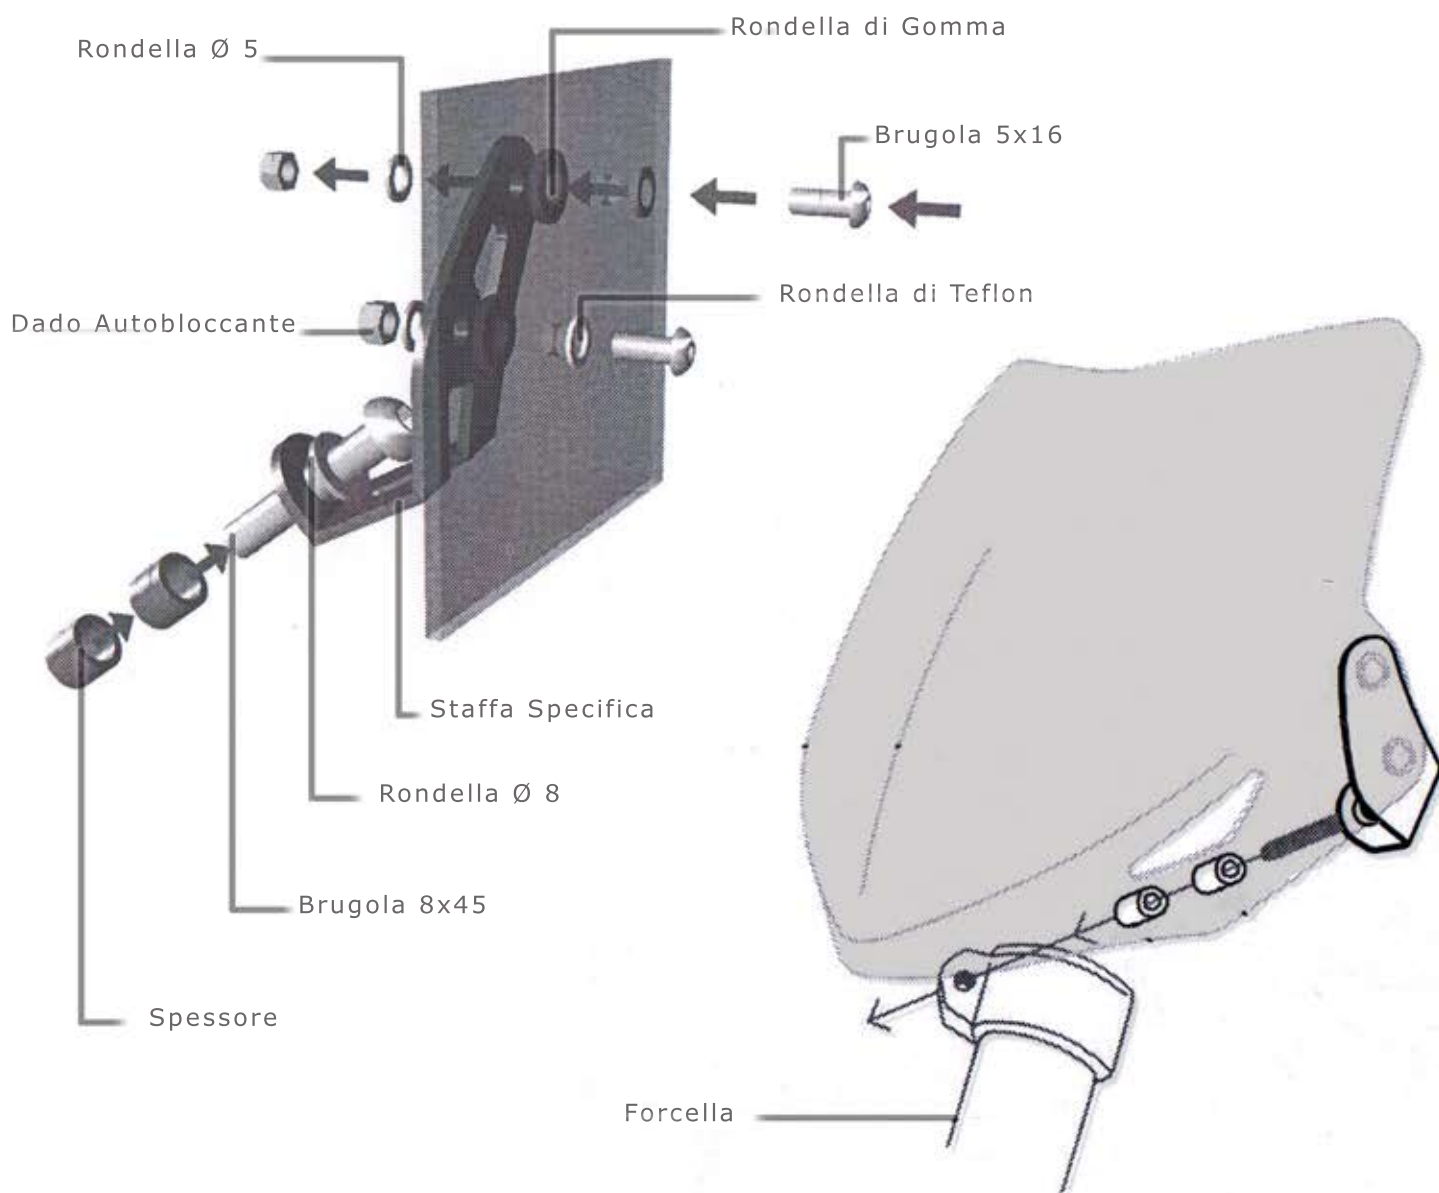

MONTARE IL KIT DUCATI STREET FIGHTER SUL CUPOLINO BARRACUDA UTILIZZANDO LE APPOSITE STAFFE ED IL KIT DI MONTAGGIO COSÌ COME RIPORTATO NELL'IMMAGINE.

ALLOGGIARE IL CUPOLINO MONTATO SULLA BASE SUPERIORE DELLA FORCELLA USANDO IL FORO DI ATTACCO ORIGINALE. USARE DUE SPESSORI PER LATO A CONTRASTO TRA LA STAFFA E LA BASE SUPERIORE DELLA FORCELLA.

USARE LE RONDELLE IN TEFLON TRA LA TESTA DELLA VITE E IL CUPOLINO MENTRE QUELLE IN GOMMA TRA LA STAFFA E IL CUPOLINO.