

MOUNTING PROCEDURE


KIT TAMPONI
HONDA CB500-X / HONDA CB500-F

HCX5101

WWW.BARRACUDAMOTO.COM

KIT

- X2. PVC KIT SAVE CARTER HEAD
- X2. SAVE CARTER BASE DIAMETER 10
- X2. THICKNESS H 94 MM
- X2. BOLT 10X160

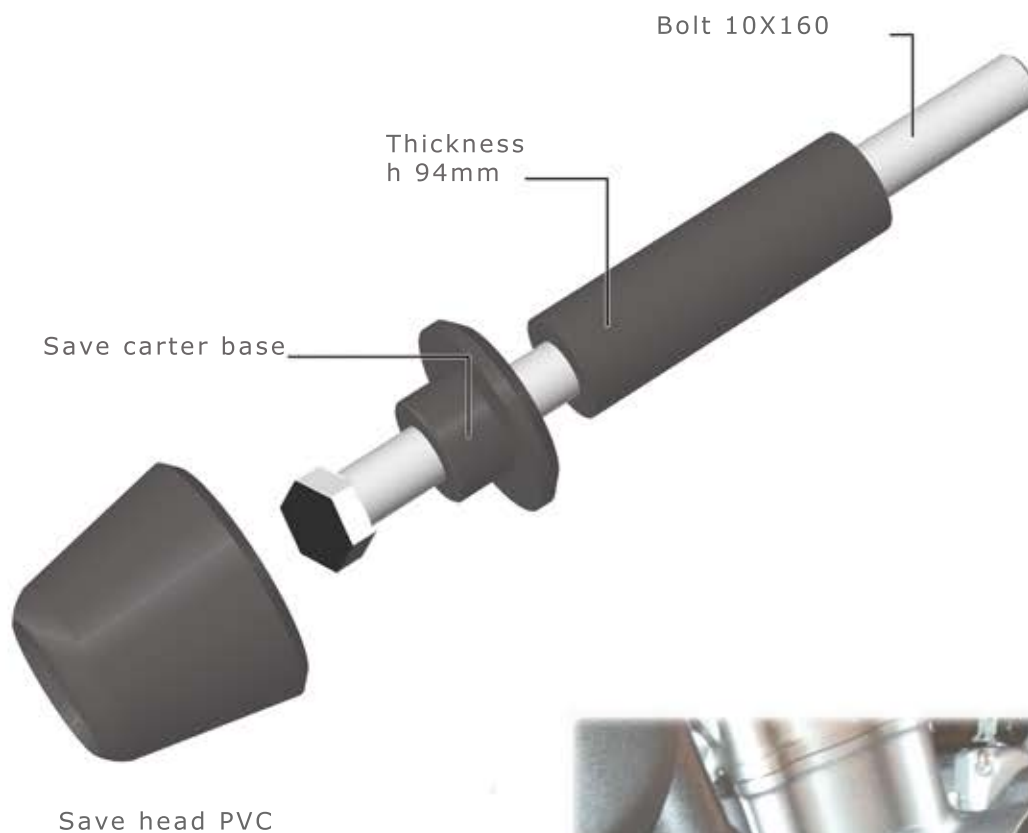

FIND THE FIXING POINTS ON THE MOTORBIKE.

USE THE SPECIFIC THICKNESS LIKE DESCRIBED IN THE PICTURE TO FIND THE RIGHT PROMINENCY OF SAVE CARTER FROM THE MOTORBIKE

MOUNT THE PVC HEAD AFTER MOUNTED AND LOCKED ALL THE REST OF KIT.