

MOUNTING PROCEDURE**KIT WINDSHIELD
HONDA CB500-X****HCX5300****KIT**

- X1. PLEXIGLASS
- X2. SPECIFIC BRACKET
- X4. AUTOLOCK NUT DIAMETER 5
- X4. SCREW 5X16 "ROUND HEAD"
- X4. TEFLON WASHER DIAMETER 5
- X4. RUBBER WASHER
- X4. LARGE WASHER DIAMETER 5

WWW.BARRACUDAMOTO.COM


MOUNTING PROCEDURE:

REMOVE THE ORIGINAL WINDSHIELD/SCREEN AND INSTALL THE SPECIFIC BRACKET WITH THE SCREWS IN KIT.

CHOOSE THE POSITION BETWEEN THE POINTS (1-1) OR THE POINTS (2-2) RESPECT TO THE REQUESTED HIGH.

PUT IN POSITION ALL LIKE THE SCHEME SHOWN.

FIND THE RIGHT POSITION ON THE BRACKETS (PREVIOUSLY MOUNTED) AND PROCEED TO LOCK ALL THE SCREWS.

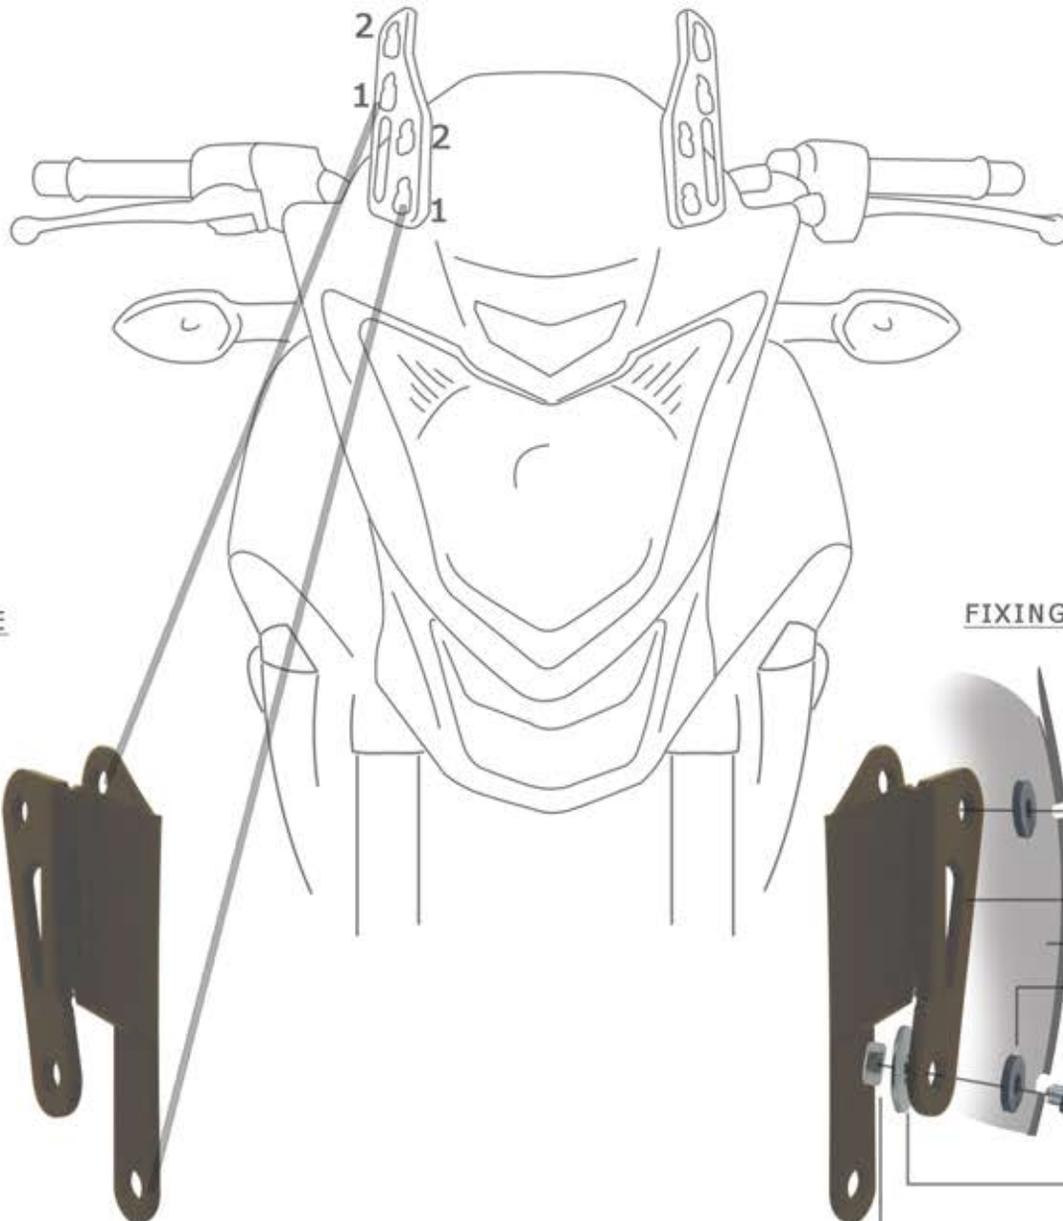

FIXING BIKE

FIXING WINDSHIELD

Specific Bracket

Plexiglass

Rubber washer

Teflon washer

Screw 5x16

Large
Washer Ø 5

Locking Nut
Ø 5

NOTE: NOT LOCK TOO MUCH TO AVOID DAMAGES OF PLEXIGLASS.