


MOUNTING PROCEDURE

KIT WINDSHIELD
HONDA CB1000 R '08
HONDA HORNET 600 2011

HN1300WWW.BARRACUDAMOTO.COM**KIT**

X1. PLEXIGLASS
 X1. SPECIFIC BRACKET A+B (4 PIECES)
 X2. THICKNESS H 13
 X2. SCREW 8X45
 X4. RUBBER WASHERS
 X4. "ROUND HEAD" SCREW 5X12
 X4. WASHERS IN TEFLON DIAMETER 5
 X4. SPECIAL BUSH
 X2. "SQUADRE SHAPE" SCREW DIAMETER 6
 X4. WASHER DIAMETER 6 LARGE
 X2. AUTOLOCK NUT DIAMETER 6

- 1** MOUNT THE BRACKET ON THE WINDSHIELD/SCREEN:
 MOUNT THE SPECIAL BUSH ON THE REAR SIDE OF BRACKET, PUT THE RUBBER WASHER BETWEEN THE PLEXIGLASS AND THE BRACKET, SCREW THE WINDSHIELD/SCREEN WITH THE "ROUND HEAD" SCREW 5X12 USING THE WASHERS IN TEFLON DIAMETER 5

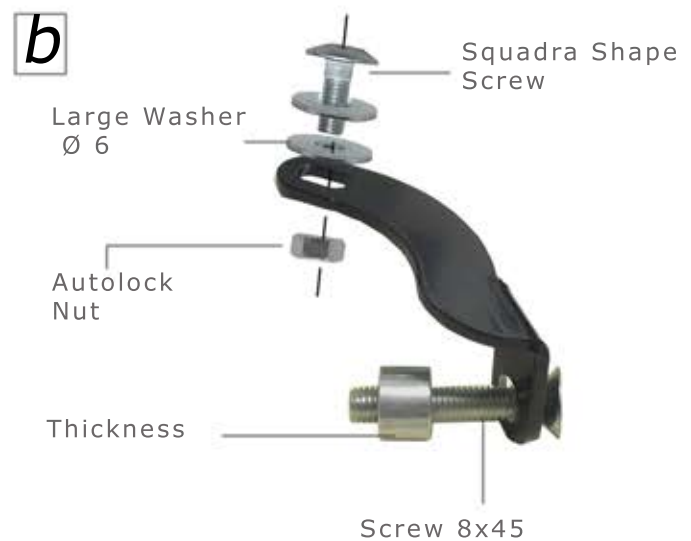

- 2** REMOVE THE FIXING SCREW FROM THE UPPER STEERING PLATE, INSERT THE THICKNESS HIGH 13 INTO THE HOLE OF STEERING PLATE, MOUNT THE PART "b" SPECIFIC BRACKET USING THE 8X45 SCREW. DON'T LOCK



- 3** MOUNT THE WINDSHIELD/SCREEN COMPLETED WITH BRACKET ON THE "b" STIRRUP MOUNTED BEFORE. USE THE LARGE WASHER AND THE AUTOLOCK NUT LIKE SHOWN IN THE PICTURE. FIND THE IDEAL POSITION AND LOCK ALL THE SCREWS



MOUNT THE WINDSHIELD/SCREEN ON THE BRACKET (PICTURE 1). REMOVE THE FIXING SCREWS OF STEERING PLATE, INSERT THE THICKNESS HIGH 13 INTO THE SCREW POSITION, APPROACH THE "B" STIRRUP AND INSERT THE 8X45 SCREW (PICTURE 2). DON'T LOCK. MOUNT THE WINDSHIELD/SCREEN WITH THE BRACKET MOUNTED BEFORE ON THE "B" STIRRUP USING THE "SQUADRE SHAPE" SCREW DIAMETER 6, THE WASHERS AND THE AUTOLOCK NUT (PICTURE 3). FIND THE IDEAL POSITION OF WINDSHIELD/SCREEN AND THAN FIX ALL THE SCREWS