

MOUNTING PROCEDURE

KIT SAVE CARTER
HONDA CBR 600 RR '13

HP6101-RR-13

KIT

- X1. THICKNESS H 20
- X2. THICKNESS H 30
- X1. THICKNEES H13
- X2. SCREW 10X70
- X2. NUT DIAMETER 10
- X1. BOLT 12X90X1,25
- X1. BOLT 12X80X1,25
- X2. BASE SAVE CARTER
- X2. PVC HEAD SAVE CARTER
- X2. SPECIFIC BRACKET
- X1. SQUARE STICKER

WWW.BARRACUDAMOTO.COM


RIGHT SIDE:

REMOVE THE SIDEWALL, UNSCREW THE ORIGINAL BOLT AND INSTALL THE SPECIFIC BRACKET WITH THE THICKNESS H 13 BETWEEN THE FAIRING OF MOTORBIKE AND THE BRACKET. USE THE SCREW 12X80X1,25 TO FIX THE BRACKET. USE THE THICKNESS H 30 BETWEEN THE BRACKET AND THE SAVE CARTER BASE.



LEFT SIDE:

REMOVE THE SIDEWALL, USCREW THE ORIGINAL BOLT AND INSTALL THE SPECIFIC BRACKET WITH THE THICKNESS H 20 BETWEEN THE FAIRING OF MOTORBIKE AND THE BRACKET. USE THE SCREW 12X90X1,25 TO FIX THE BRACKET. USE THE THICKNESS H 30 BETWEEN THE BRACKET AND THE SAVE CARTER BASE.

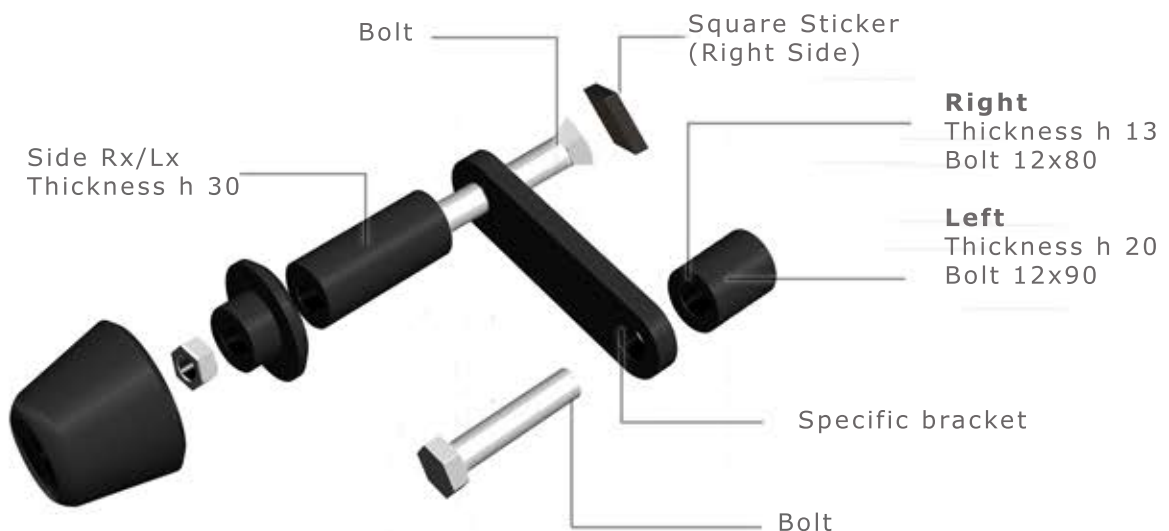

ATTENTION:

BEFORE INSTALL FIND THE FIXING POINTS, FOLLOW THE PROCEDURE DESCRIBED AND LOCK ALL, APPLY THE SQUARE STICKER TO AVOID THE BRACKET TOUCH THE MOTORBIKE CARTER ON THE LEFT SIDE.

MOUNT THE SAVE CARTER HEAD AFTER THE MOUNTING PROCEDURE AND AFTER THE LOCKING.