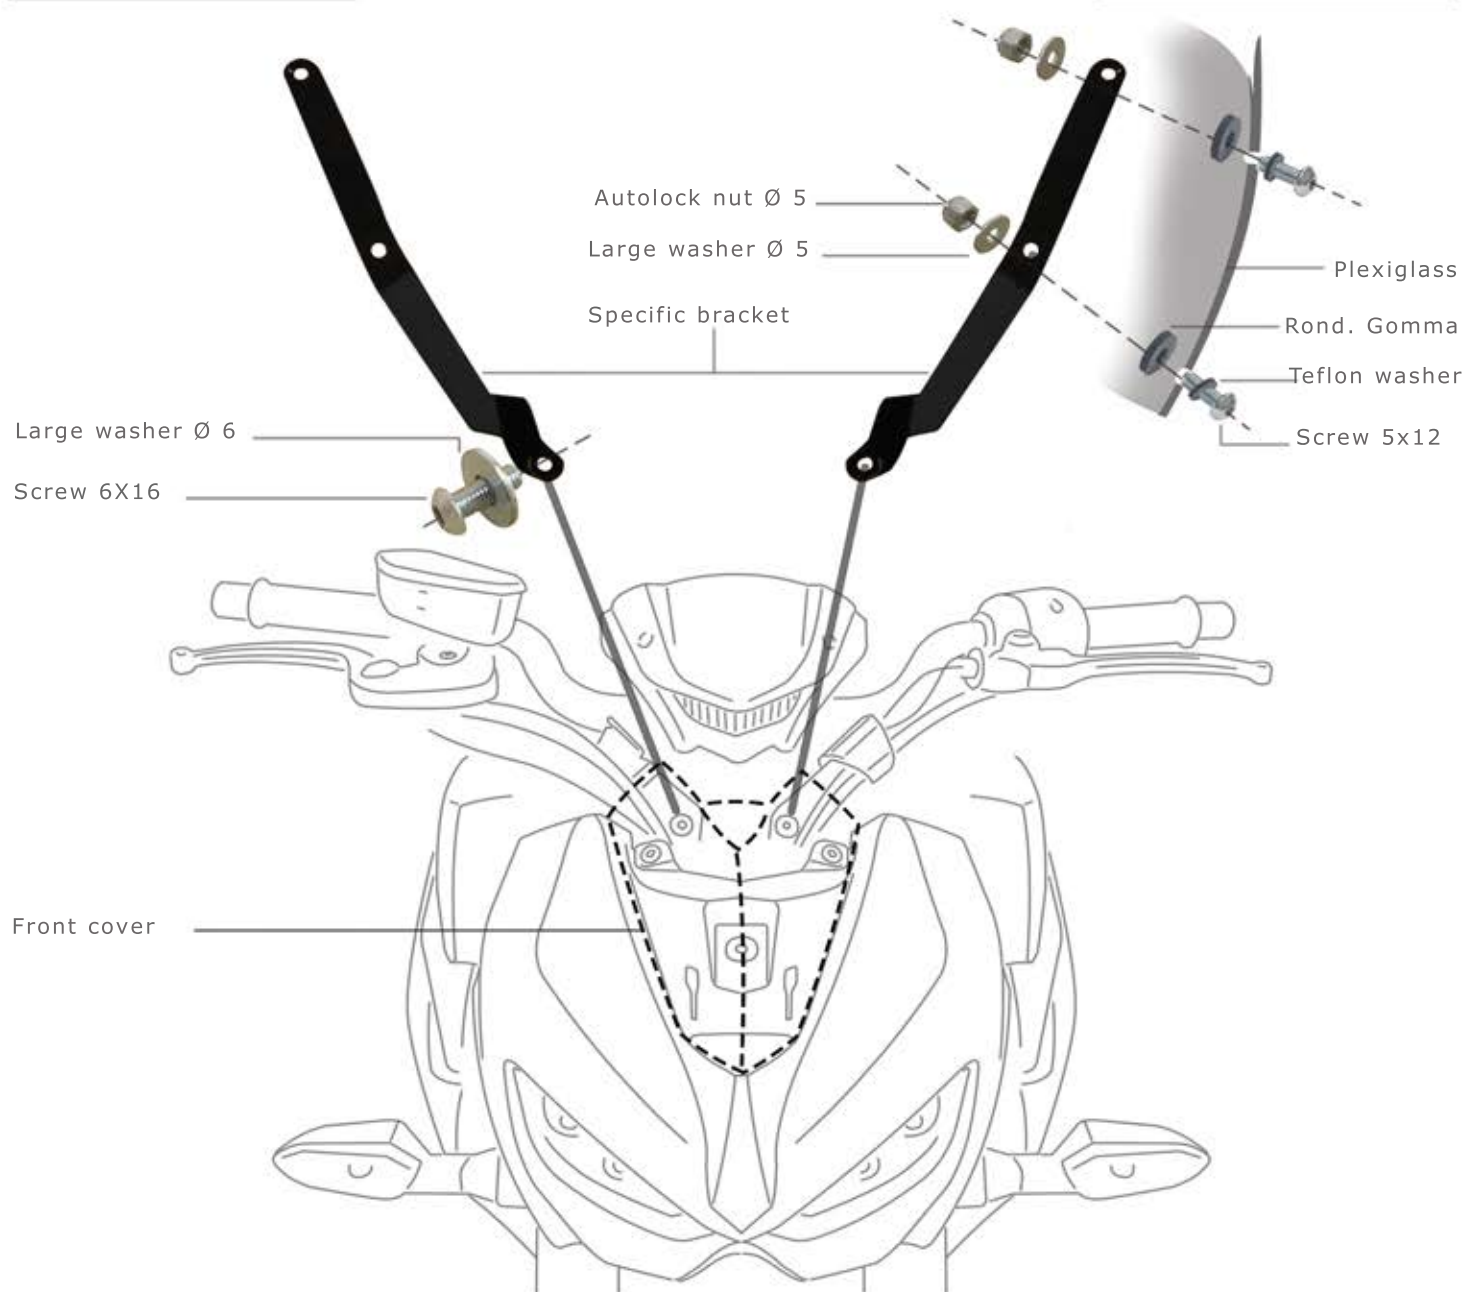


**MOUNTING PROCEDURE****KIT WINDSHIELD  
KAWASAKI Z1000 '14****KN1300-14**[WWW.BARRACUDAMOTO.COM](http://WWW.BARRACUDAMOTO.COM)**MOUNTING PROCEDURE:**

PUT THE BARRACUDA WINDSHIELD ON THE SPECIFIC BRACKET LIKE SHOWN IN THE PICTURE. REMOVE THE FRONT COVER AND INSTALL THE SPECIFIC BRACKET IN THE HIGHLIGHTED POINTS. LOCK THE BRACKET WITH THE SCREW 6X16 POSITIONING ALL LIKE IN THE PICTURE.

**KIT**

- X1. PLEXIGLASS
- X2. SPECIFIC BRACKET
- X4. "ROUND HEAD" SCREW 5X12
- X2. "ROUND HEAD" SCREW 5X12 6X16
- X4. AUTOLOCK NUT Ø 5
- X4. LARGE WASHER Ø 5
- X2. LARGE WASHER Ø 6
- X4. TEFLON WASHER Ø 5
- X4. RUBBER WASHER

**FIXING ON MOTORBIKE****FIXING OF WINDSHIELD**

NOTE: DON'T LOCK TOO MUCH TO AVOID POSSIBLE PLEXIGLASS DAMAGES