



ISTRUZIONI DI MONTAGGIO

KIT SAVE CARTER KAWASAKI Z650 '17

KN6101-17

WWW.BARRACUDAMOTO.COM

KIT

X2. PVC HEAD CRASH PAD
X2. BASE CRASH PAD
X1. THICKNESS H.60 (LEFT SIDE)
X1. THICKNESS H.20 (RIGHT SIDE)
X2. BOLT 10X180

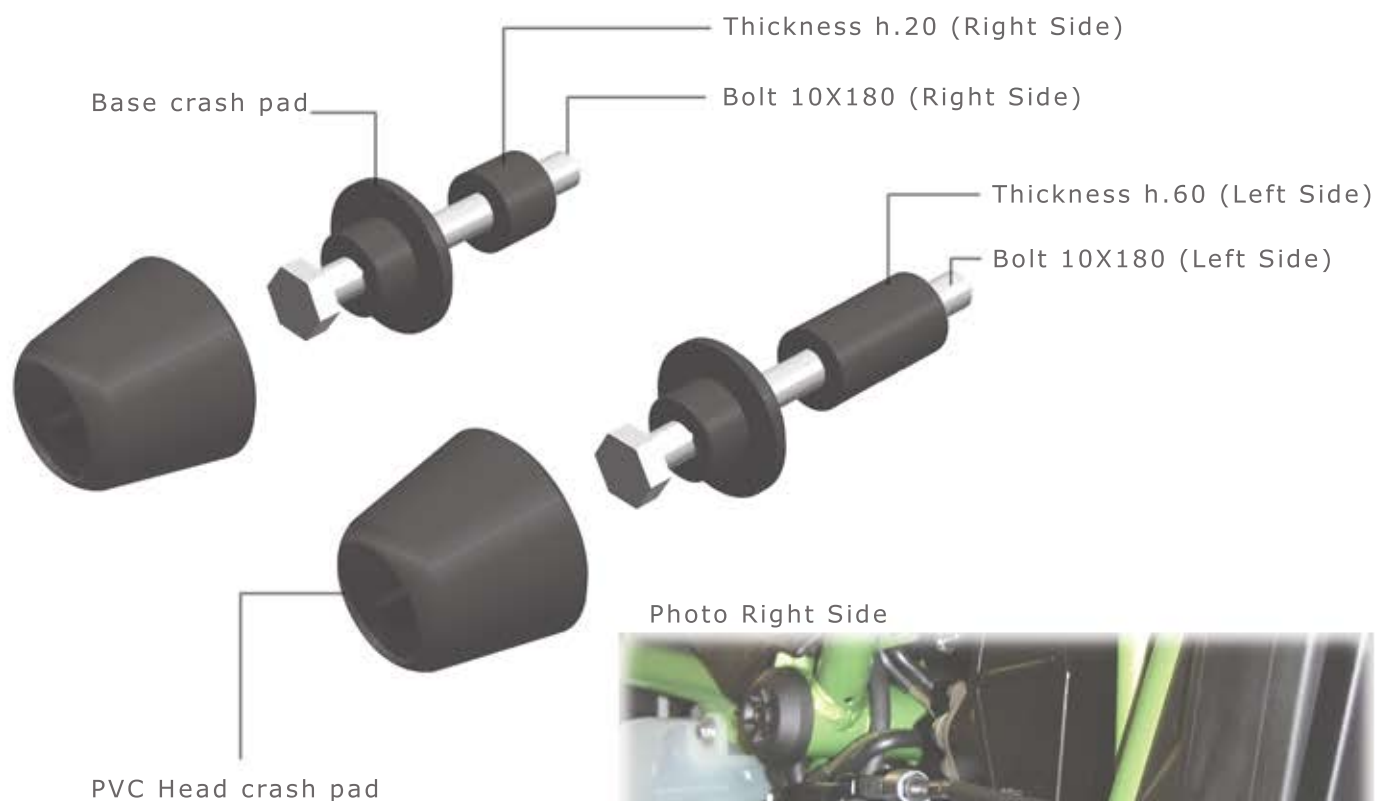


Photo Right Side



FIND THE FIXING POINT ON THE MOTORBIKE;

USE THE SPECIFIC THICKNESS AND BOLTS AS DESCRIBED IN THE PICTURE TO OBTAIN THE RIGHT POSITION OF CRASH PAD FROM MOTORBIKE;

FIX THE PVC HEAD OF CRASH PAD AFTER LOCKED ALL THE KIT ONLY.



ISTRUZIONI DI MONTAGGIO

KIT TAMPONI PARATELAIO KAWASAKI Z650 '17

KN6101-17

WWW.BARRACUDAMOTO.COM

KIT

X2. TESTE TAMPONE PVC
X2. BASE TAMPONE
X1. DISTANZIALE H.60 (LATO SX)
X1. DISTANZIALE H.20 (LATO DX)
X2. BULLONE 10X180

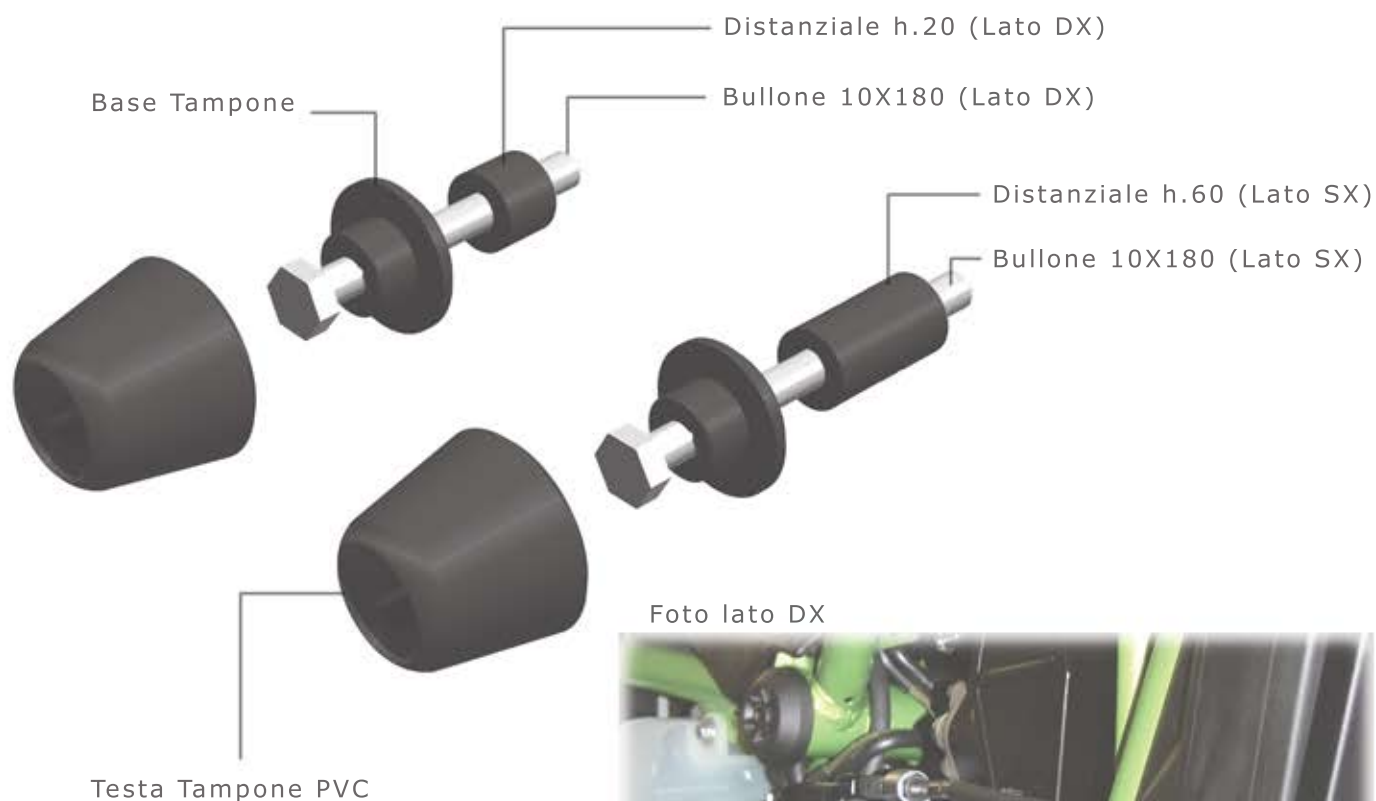


Foto lato DX



INDIVIDUARE I PUNTI DI FISSAGGIO SULLA MOTO;

UTILIZZARE GLI APPOSITI SPESSORI E BULLONI COME DESCRITTO NELL' IMMAGINE IN MODO DA OTTENERE LA GIUSTA SPORGENZA DEL TAMPONE DALLA MOTO;

MONTARE LA TESTA TAMPONE IN PVC SOLO DOPO AVER MONTATO E SERRATO BENE TUTTO IL KIT.