

MOUNTING PROCEDURE

KIT SAVE CARTER
KTM DUKE 125-200-390

KTM3101


WWW.BARRACUDAMOTO.COM

FIXING PROCEDURE:

- FINDING THE FIXING POINT ON THE MOTORBIKE;
- USE THE THICKNESS AND BOLTS LIKE DESCRIBED IN THE IMAGE TO OBTAIN THE RIGHT PROJECTION OF CRASH PAD FROM THE MOTORBIKE;
- FIX THE PVC HEAD ONLY AFTER FIXED AND LOCKED ALL THE KIT.

KIT

- X2. PVC HEAD
- X2. CRASH PAD BASE
- X2. THICKNESS
- X2. BOLT 8X120
- X2. WASHER Ø 8

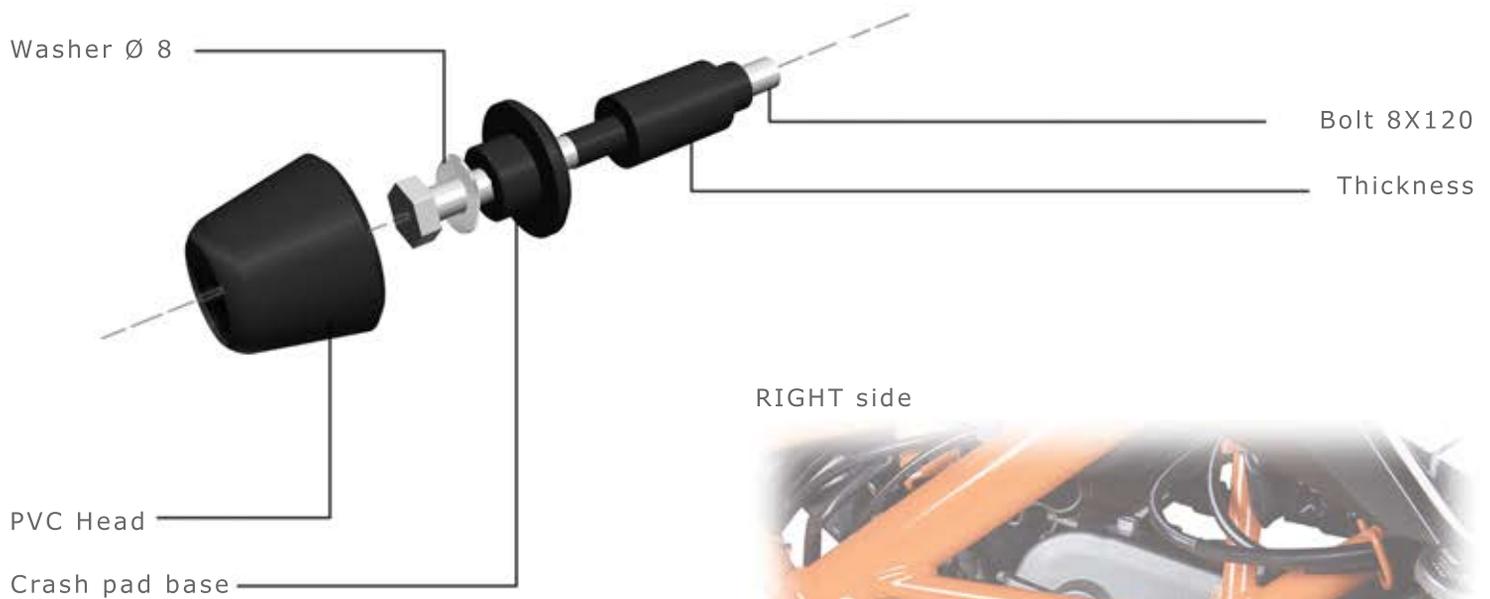

RIGHT side

