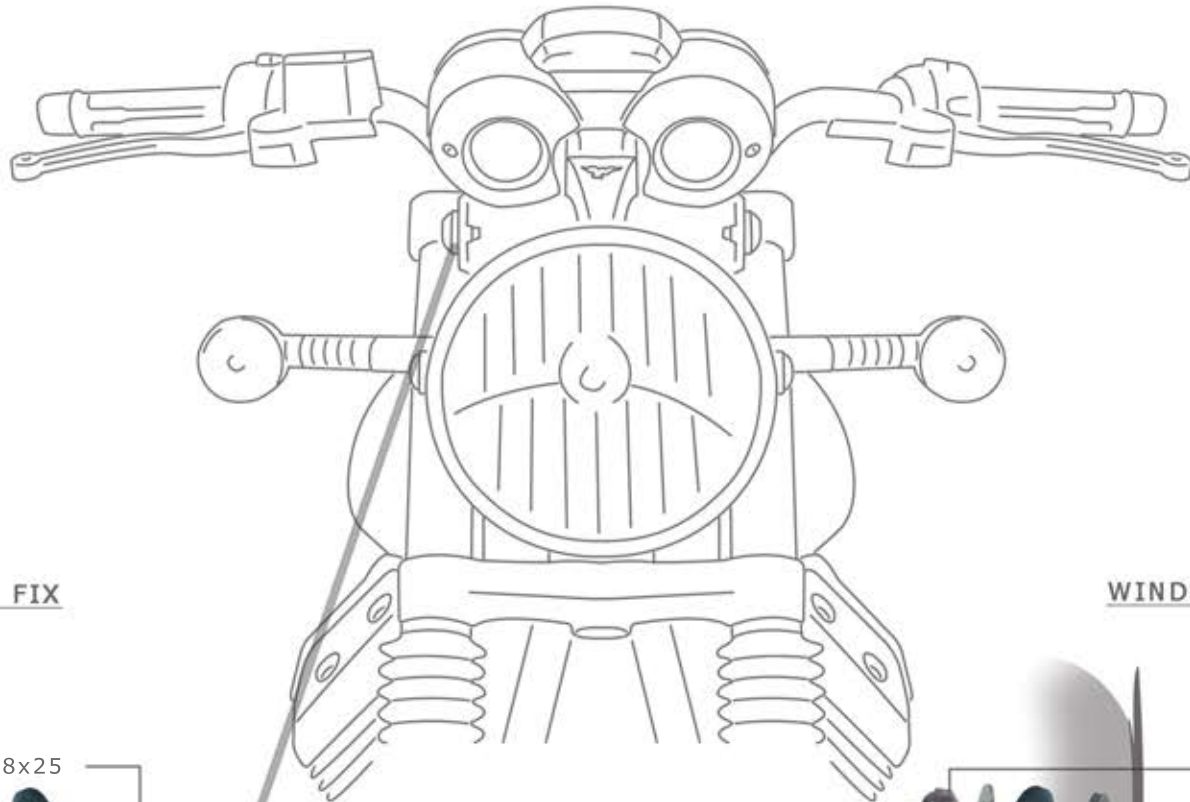
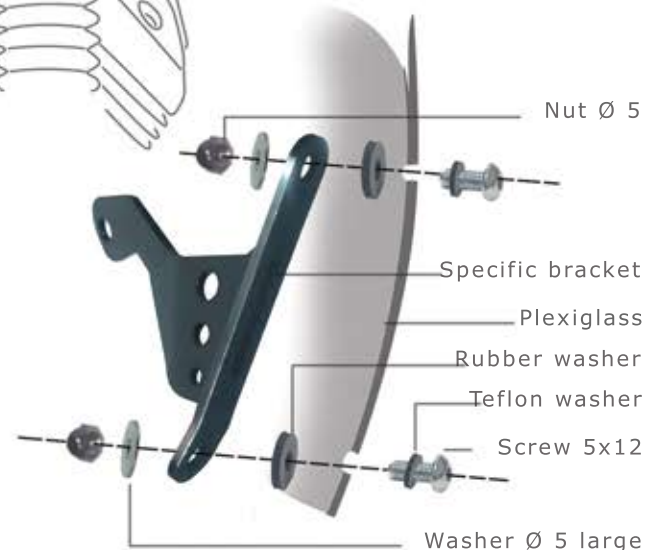


**MOUNTING PROCEDURE****KIT WINDSHIELD  
MOTO GUZZI V7****MG7300**[WWW.BARRACUDAMOTO.COM](http://WWW.BARRACUDAMOTO.COM)**MOUNTING PROCEDURE:**

- REMOVE ORIGINAL SCREWS AND INSTALL THE BRACKET OF BARRACUDA WINDSHIELD USING THE 8X25 SCREWS AND SCREWS IN THE KIT;
- PUT ALL LIKE ILLUSTRATED SCHEME;
- FIND THE RIGHT POSITION OF WINDSHIELD ON THE BRACKET ALREADY FIXED AND LOCK ALL THE SCREWS

**KIT**

- X1. PLEXIGLASS
- X2. SPECIFIC BRACKET
- X4. "ROUND HEAD" SCREW 5X12
- X2. "ROUND HEAD" SCREW 8X25
- X2. THICKNESS H.10
- X4. NUT Ø 5 AUTOLOCK
- X4. WASHER Ø 5 LARGE
- X4. TEFLON WASHER Ø 5
- X4. RUBBER WASHER

**MOTO FIX****WINDSHIELD FIX**

NOTE: DON'T LOCK TOO MUCH TO AVOID PLEXIGLASS BROKEN.