


**MOUNTING PROCEDURE****KIT WINDSHIELD  
SUZUKI GSR 600****SG6300**[WWW.BARRACUDAMOTO.COM](http://WWW.BARRACUDAMOTO.COM)**KIT**

- X2. BRACKET
- X2. THICKNESS DIAMETER 10
- X2. "ROUND HEAD" SCREW 8X45
- X2. WASHER DIAMETER 8
- X4. "ROUND HEAD" SCREW 5X16
- X4. TEFLON WASHER DIAMETER 5
- X4. RUBBER WASHER
- X4. WASHER DIAMETER 5
- X4. AUTOLOCK NUT DIAMETER 5

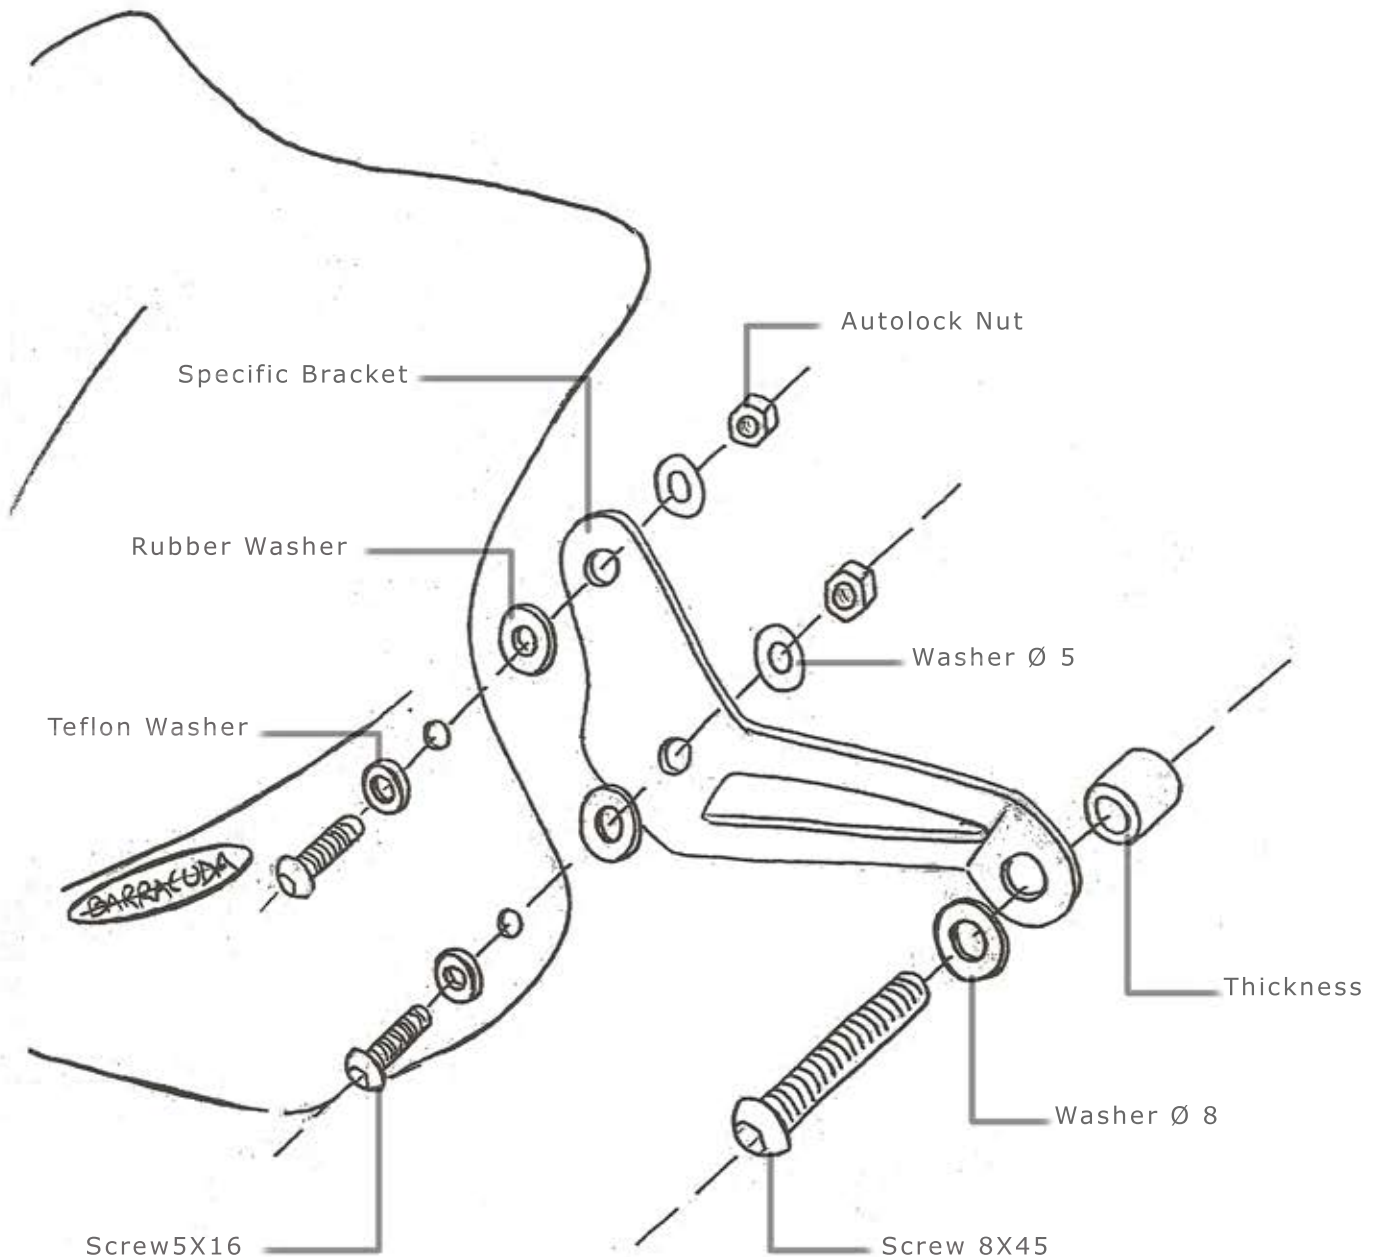

INSTALL THE WINDSHIELD/SCREEN LIKE DESCRIBED IN THE PICTURE: PUT THE TEFLON WASHERS BETWEEN THE SCREW AND THE WINDSHIELD/SCREEN.

NOTE: DON'T LOCK TOO MUCH THE AUTOLOCK NUTS DIAMETER 5 TO AVOID DAMAGES.