


MOUNTING PROCEDURE**KIT LICENCE PLATE
TRIUMPH STREET TRIPLE R 2013****TS6104-13**WWW.BARRACUDAMOTO.COM**KIT**

X1 SPECIFIC BRACKET
X2 THICKNESS HIGH 9 MM
X1 THICKNESS HIGH 5 MM
X2 SCREW 6X30
X1 SCREW 6X20
X3 LARGE WASHER
X3 AUTOLOCK NUT

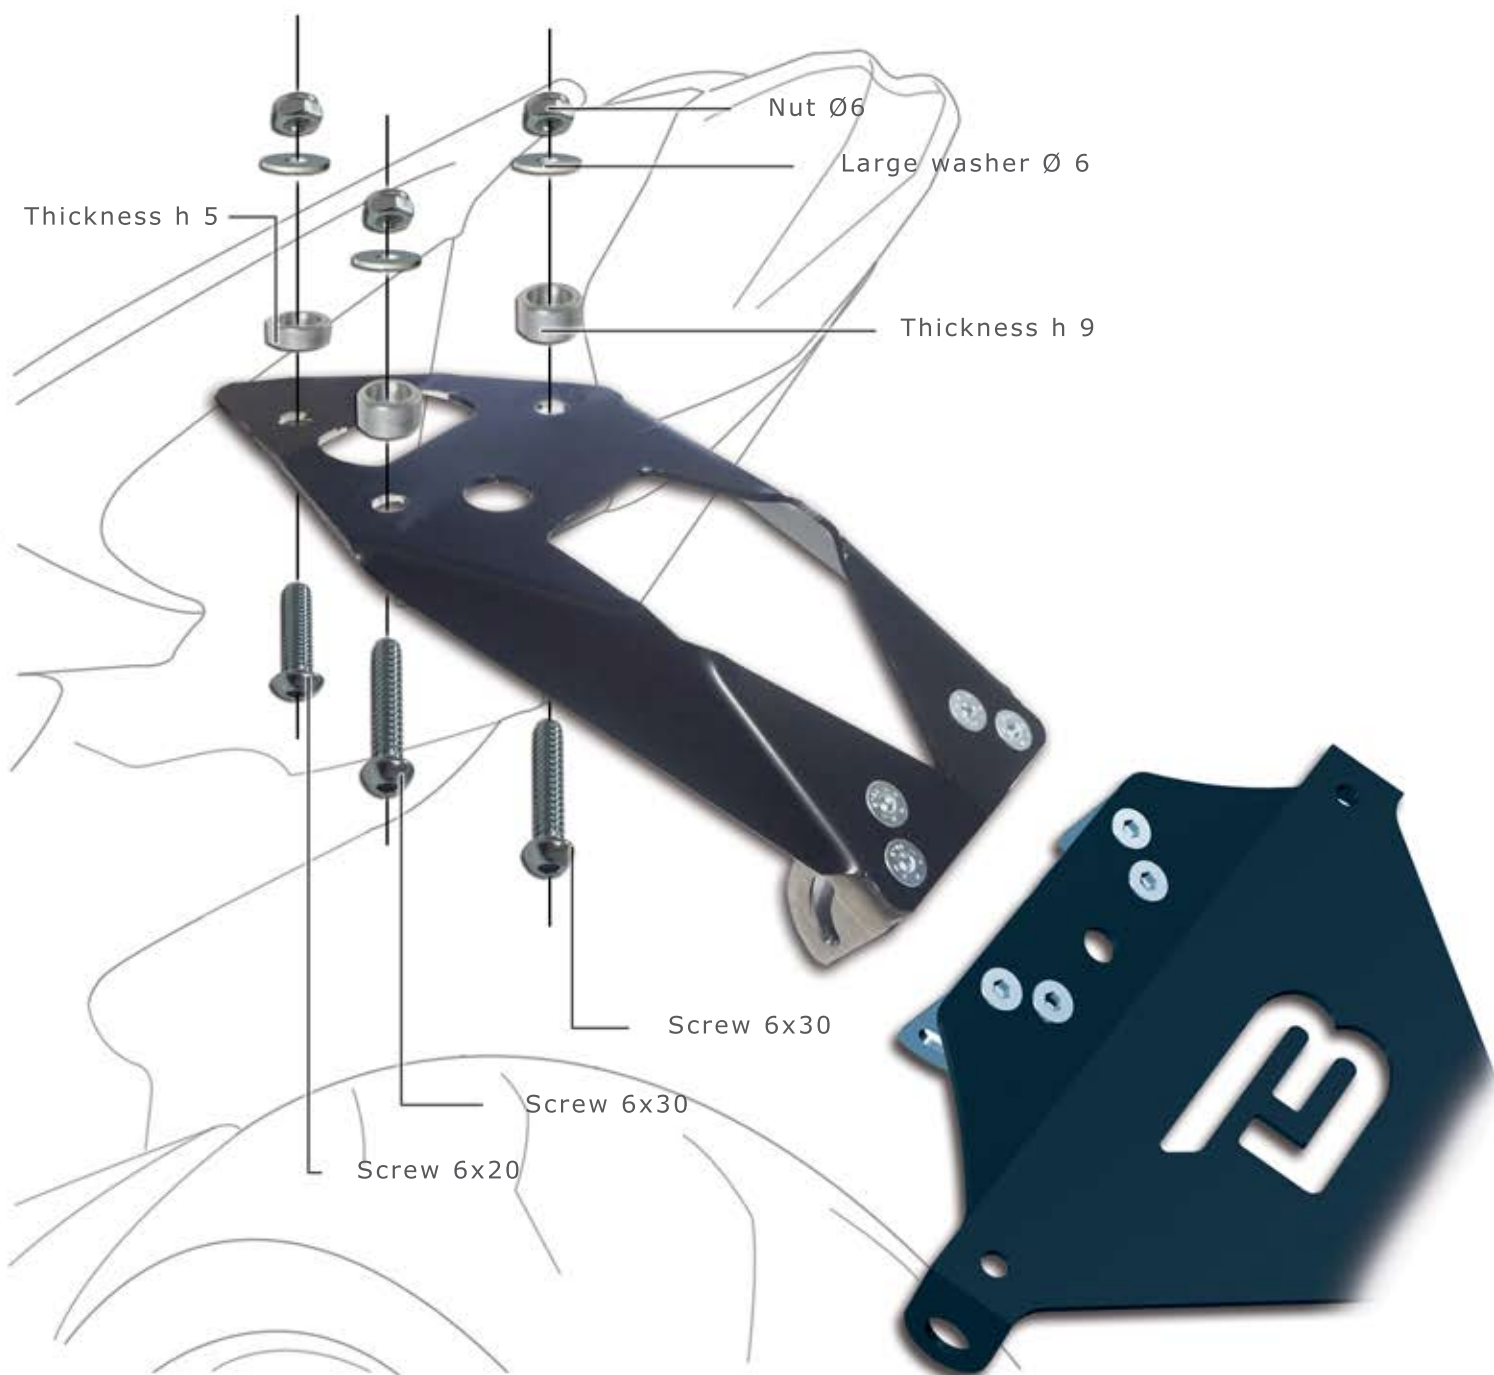

REMOVE THE ORIGINAL LICENCE PLATE. MOUNT THE SPECIFIC BRACKET BARRACUDA USING THE THICKNESS AND SCREWS INCLUDED INTO THE KIT LIKE SHOWN IN THE PICTURE. USE THE THICKNESS BETWEEN THE BRACKET AND THE CHASSIS.

APPROACH THE "X" LICENCE PLATE TO THE INSTALLED BRACKET.
LOCK ALL THE SCREWS

WE ADVISE AN INCLINATION NOT EXCEEDING TO 30° TO AVOID SANCTIONS AND POSSIBLE DAMAGES