

## MOUNTING PROCEDURE


KIT SAVE CARTER  
YAMAHA MT07

**YMT7101**

[WWW.BARRACUDAMOTO.COM](http://WWW.BARRACUDAMOTO.COM)

## KIT

X2. THICKNESS  
X2. SCREW 12X100  
X2. PVC HEAD  
X2. SAVE CARTER BASE

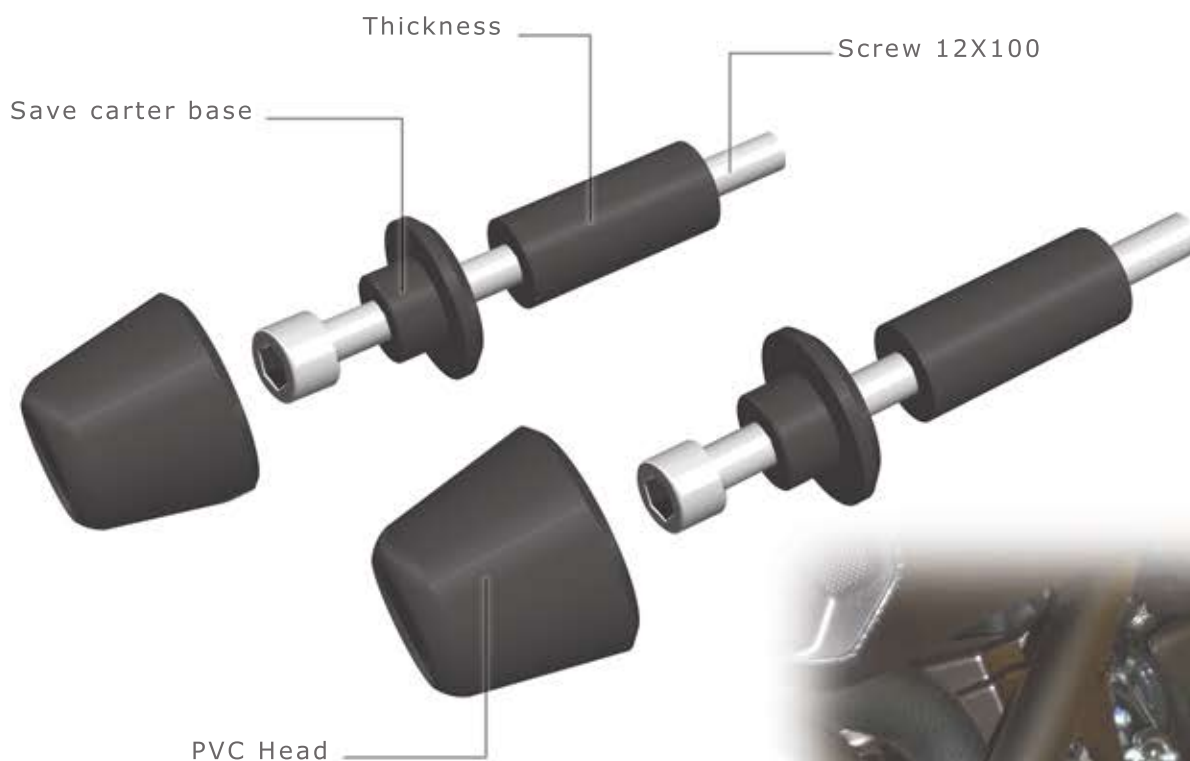

ATTACK POINT TO THE CHASSIS



FIND THE FIXING POINTS ON THE MOTORBIKE.

USE THE SPECIFIC THICKNESS LIKE DESCRIBED IN THE PICTURE TO FIND THE RIGHT PROMINENCY OF SAVE CARTER FROM THE MOTORBIKE

MOUNT THE PVC HEAD AFTER MOUNTED AND LOCKED ALL THE REST OF KIT.