

## MOUNTING PROCEDURE


### KIT SAVE CARTER YAMAHA MT-09

**YMT9101**

[WWW.BARRACUDAMOTO.COM](http://WWW.BARRACUDAMOTO.COM)

## KIT

- X2. PVC SAVE CARTER HEAD
- X2. SAVE CARTER BASE
- X1. THICKNESS H 50 (LEFT SIDE)
- X1. THICKNESS H 11 (RIGHT SIDE)
- X1. SCREW 10X70 (RIGHT SIDE)
- X1. SCREW 10X110 (LEFT SIDE)

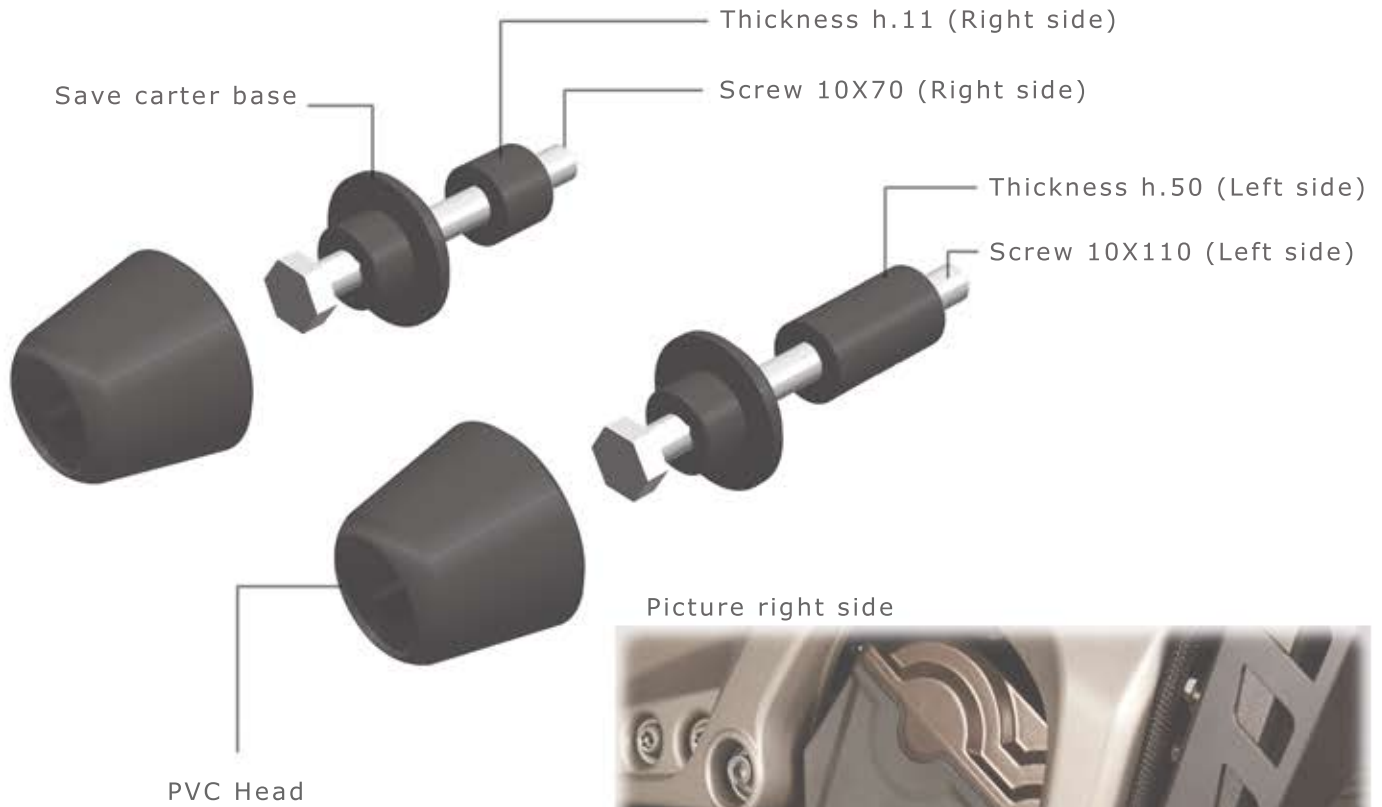

Picture right side



FIND THE FIXING POINTS ON THE MOTORBIKE;

USE THE SPECIFIC THICKNESS AND SCREWS LIKE SHOWN IN THE PICTURE TO FIND THE RIGHT PROMINENCY OF SAVE CARTER FROM THE MOTORBIKE

MOUNT THE PVC HEAD AFTER MOUNTED AND LOCKED ALL THE REST OF KIT.