

MOUNTING PROCEDURE


KIT WINDSHIELD
YAMAHA T-MAX '12

YT5300-12

WWW.BARRACUDAMOTO.COM

KIT

- X1. SPECIFIC PLEXIGLASS
- X4. TEFLON WASHER
- X2. RUBBER WASHER
- X2. TEFLON WASHER HIGH 10
- X2. SCREW 5X30
- X2. SCREW 5X20

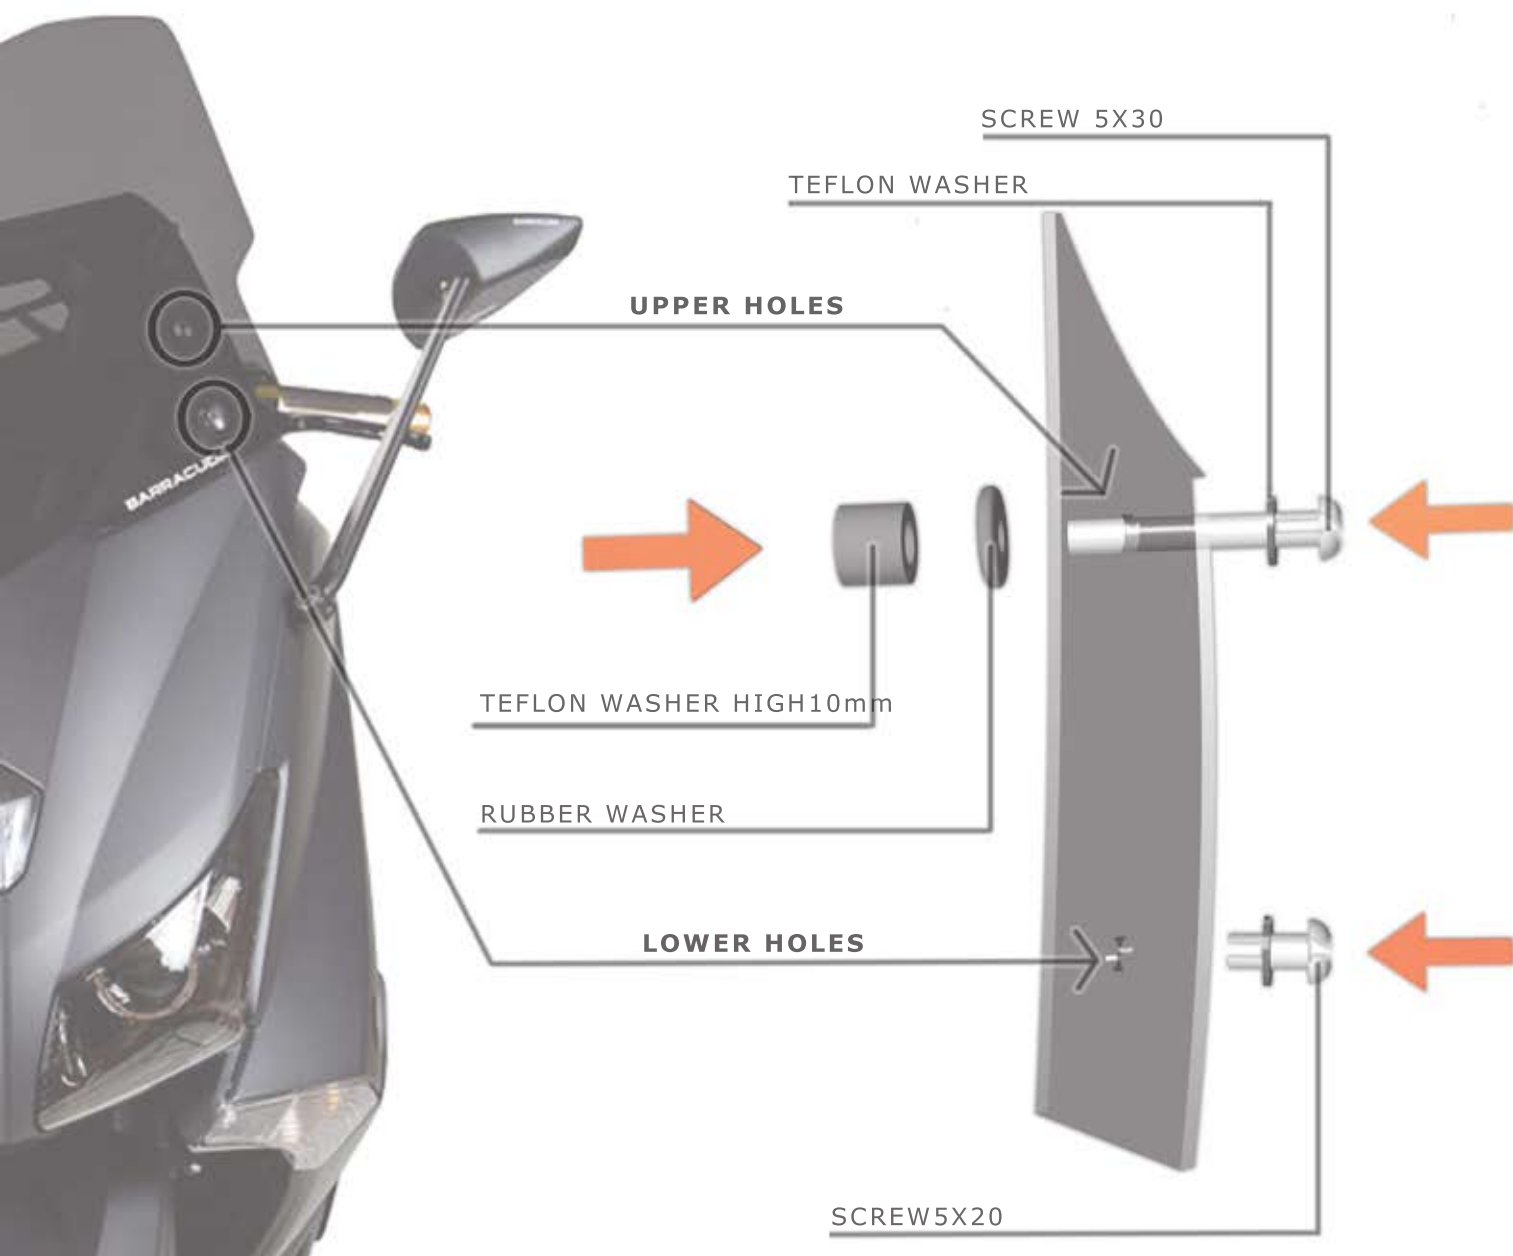

REMOVE THE ORIGINAL WINDSHIELD/SCREEN AND APPROACH THE BARRACUDA WINDSHIELD/SCREEN. MOUNT IT LIKE THE INSTRUCTION USING THE SCREWS AND THICKNESS INCLUDED. USE THE ORIGINAL SCREW FOR FIXING THE LOWER PART OF PLEXIGLASS.

NOTE: WE ADVISE TO LOCK ALL AFTER YOU FIX THE WINDSHIELD/SCREEN TO AVOID DAMAGES DUE TO FORCING