



A310 - KA310

ATTACCHI SPECIFICI PER - SPECIFIC FITTING KIT FOR
 KIT DE MONTAGE SPECIFIQUE POUR - SPEZIFISCHER MONTAGEKIT FÜR
 ANCLAE ESPECIFICO PARA
HONDA CB600F HORNET '07
ABS

ISTRUZIONI DI MONTAGGIO - MOUNTING INSTRUCTIONS
 INSTRUCTIONS DE MONTAGE - BAUANLEITUNG - INSTRUCCIONES DE MONTAJE

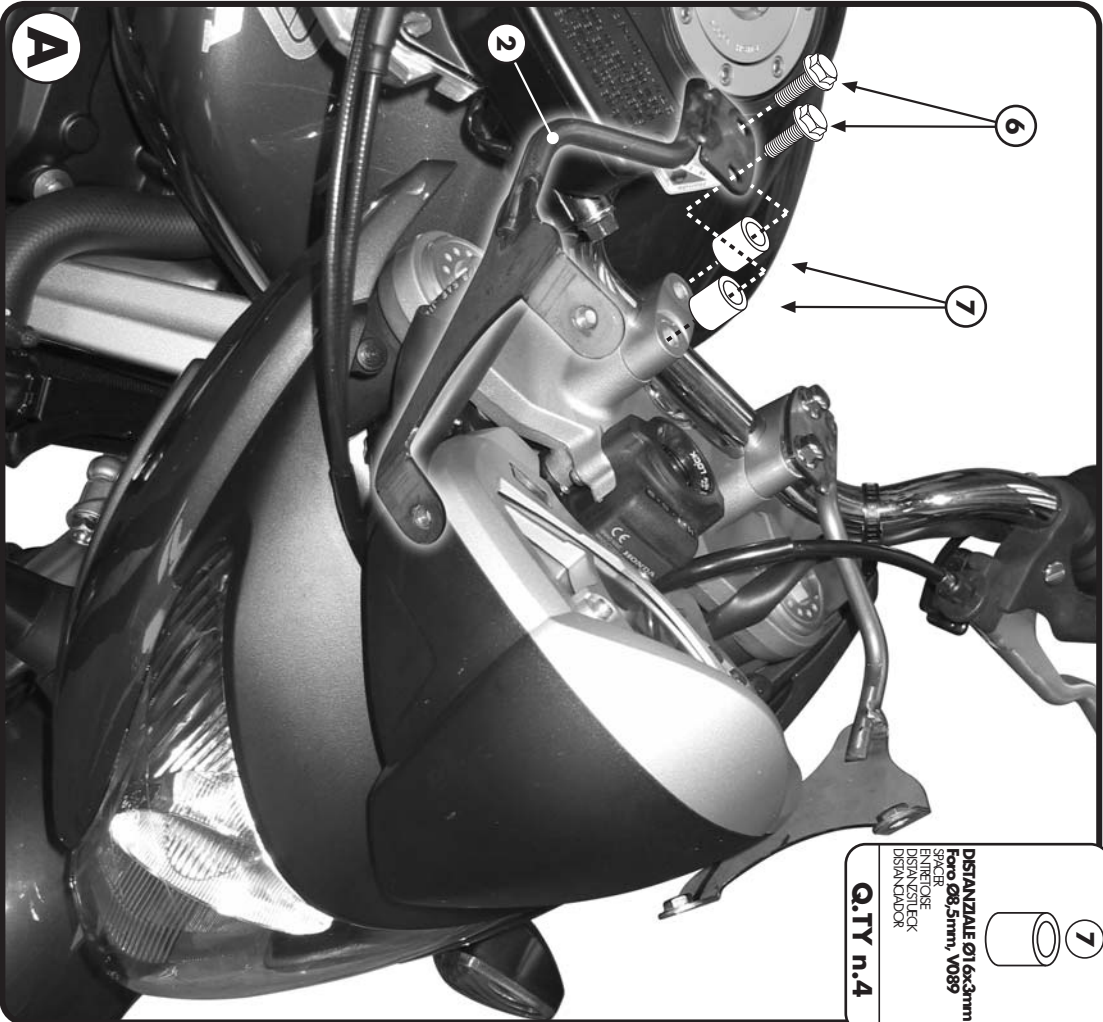

7
 DISTANZIALE Ø16x3mm
 Spacer
 ENTRETÔISE
 DISTANZSTÜCKER
 DISTANCIADOR
Q.TY n.4

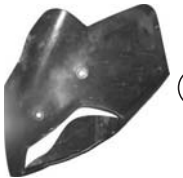

1
Q.TY n.1



2
 SUPPORTO
 SUPPORT
 HAUTENING
 SOPORTE
Q.TY n.2(10x-5x)



3
 VITE TSGEL M6x16mm
 INOX
 SCREW M6x16mm
 VIS M6x16mm
 SCHRAUBE M6x16mm
 TORNILLO M6x16mm
Q.TY n.4




4
 RONDELLA
 WASHER
 RONDELE
 SCHENBE
 ARANDELA
 Ø6mm
Q.TY n.4



5
 RONDELLA IN GOMMA
 RUBBER WASHER
 RONDELE EN CAOUTCHOUX
 GUMMI SCHIBE
 ARANDELA DE GOMA
Q.TY n.8



6
 VITE TEF M8x40mm
 SCREW M8x40mm
 VIS M8x40mm
 SCHRAUBE M8x40mm
 TORNILLO M8x40mm
Q.TY n.4

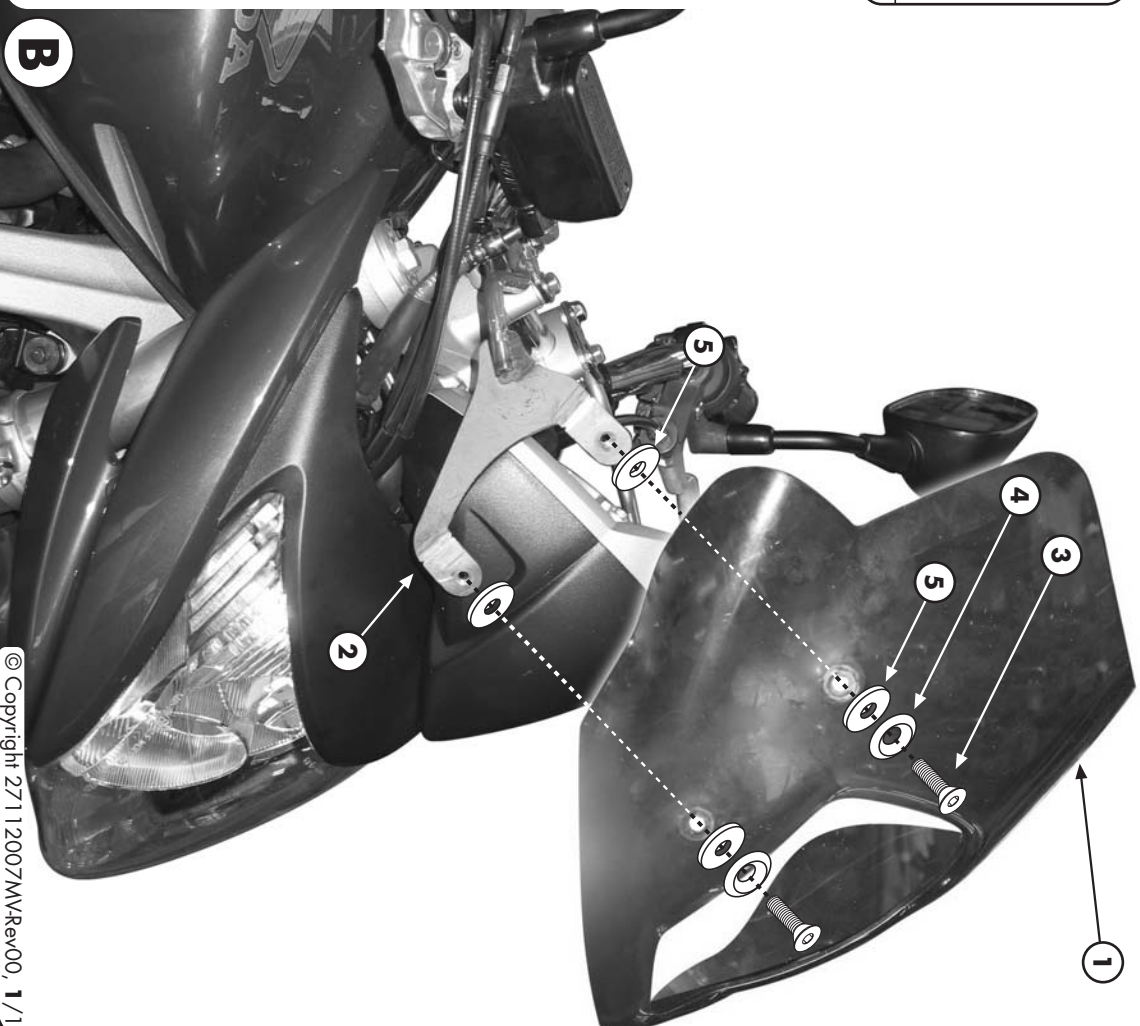

B